


## 8. Warning Box

### A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the upper grille. <Ref. to AC-52, UPPER GRILLE, REMOVAL, Air Vent Grille.>
- 3) Remove the screws of warning box (1) and pull out the warning box.

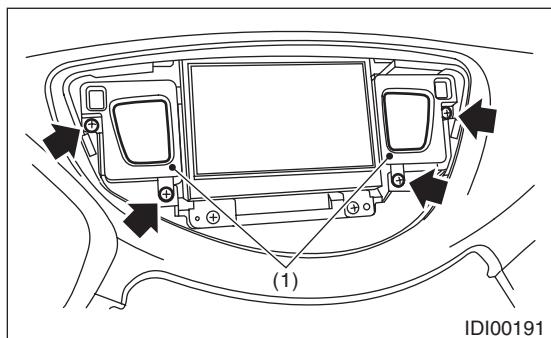

- 4) Disconnect the connector in the rear side of warning box to remove the warning box.

### B: INSTALLATION

#### CAUTION:

- Make sure the electrical connector is connected securely.
- Make sure that each indicator operates normally.

Install in the reverse order of removal.

## Warning Box

INSTRUMENTATION/DRIVER INFO

---

# SEATS

**SE**

---

	Page
1. General Description .....	2
2. Front Seat .....	7
3. Second Seat .....	15
4. Third Seat .....	21
5. Seat Heater System .....	24
6. Power Seat System .....	25