

9. Read Current Data

A: OPERATION

- 1) On «Main Menu» display, select {Each System Check}.
- 2) On «System Selection Menu» display, select {Integ. unit mode}.
- 3) On «Integ. unit mode failure diag» display, select {Current Data Display & Save}.
- 4) On «Data Display Menu» display, select {Data Display}.
- 5) Using the scroll key, scroll the display screen up or down until the desired data is shown.
<Ref. to LAN(diag)-13, DISPLAY OF CURRENT DATA, OPERATION, Subaru Select Monitor.>
<Ref. to LAN(diag)-18, CONFIRMATION OF CURRENT SETTING, OPERATION, Subaru Select Monitor.>