


## 31. Luggage Room Light

### A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the luggage room light body (A).

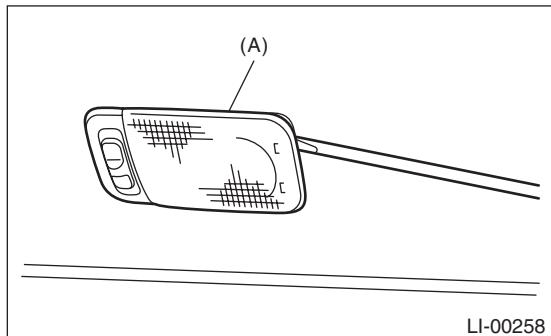

- 3) Disconnect the harness connector and remove the lens.

### B: INSTALLATION

Install in the reverse order of removal.


### C: INSPECTION

#### 1. LUGGAGE ROOM LIGHT BULB

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace the bulb with a new part.

#### 2. LUGGAGE ROOM LIGHT SWITCH

Measure the resistance between luggage room light switch terminals.

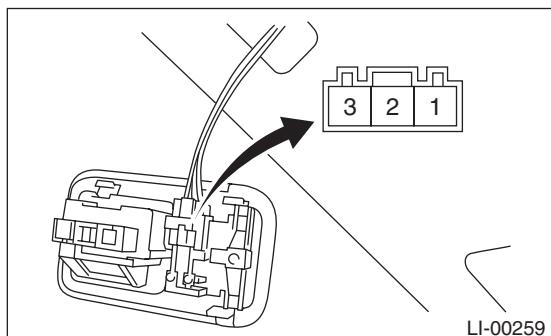

| Switch position | Terminal No. | Standard     |
|-----------------|--------------|--------------|
| OFF             | —            | 1 MΩ or more |
| ON              | 1 and 2      | 1.5±0.5 Ω    |
| DOOR            | 2 and 3      | 1.5±0.5 Ω    |