


37. Reflex Reflector

A: REMOVAL

- 1) Remove the nut (A) from the back of the rear bumper.
- 2) Remove the reflex reflector by pressing the claw (B) of the reflex reflector.

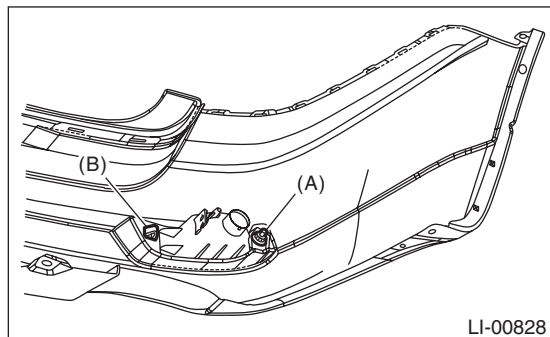

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)