


6. Second Seat Belt


A: REMOVAL

1. OUTER SEAT BELT RH ASSEMBLY AND LH ASSEMBLY


- 1) Remove the second row seats. <Ref. to SE-15, LH&CTR SEAT, REMOVAL, Second Seat.>
- 2) Remove the third-row seats. <Ref. to SE-21, REMOVAL, Third Seat.>
- 3) Remove the rear quarter trim. <Ref. to EI-47, REMOVAL, Rear Quarter Trim.>
- 4) Remove the bolt, and then remove the shoulder anchor.

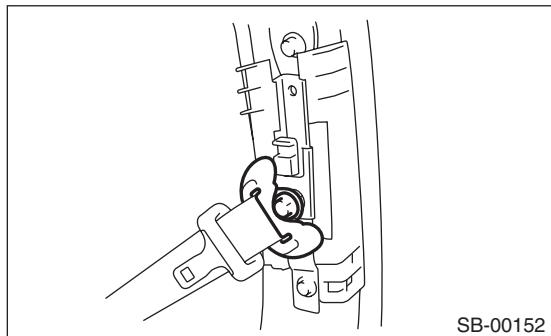


- 5) Remove the bolts and then remove adjustable anchor assembly.

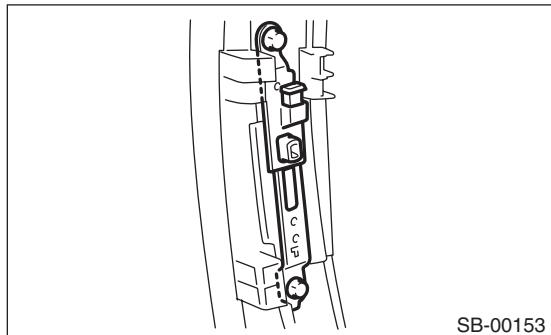

- 6) Remove the lower anchor bolt.

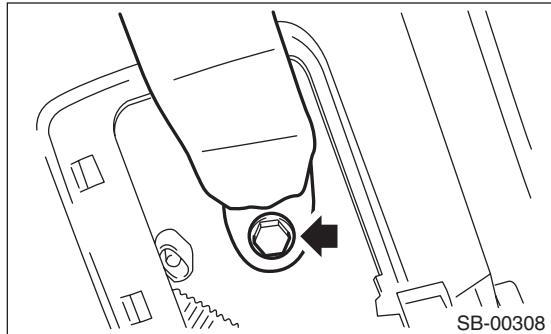


- 7) Remove the bolt to remove outer seat belt retractor.

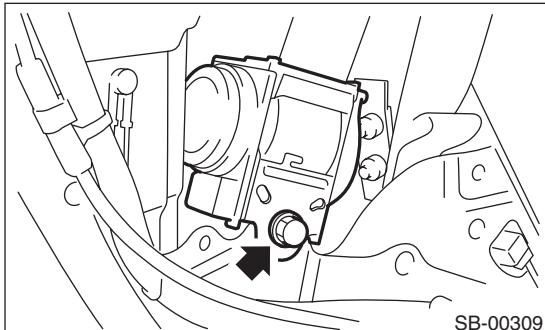

2. SHOULDER SEAT BELT CENTER ASSEMBLY


- 1) Remove the rear quarter trim. <Ref. to EI-47, REMOVAL, Rear Quarter Trim.>
- 2) Remove the cover (A) from roof trim, and then insert it to the inside of roof trim.

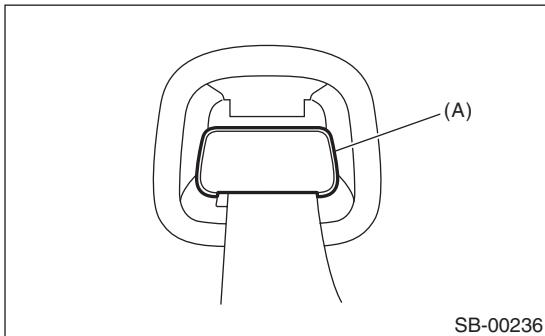


- 3) Remove the clips, and then lower the roof trim end.

CAUTION:

Do not pull the roof trim end backward with excessive force. There is the possibility of the roof trim being damaged.

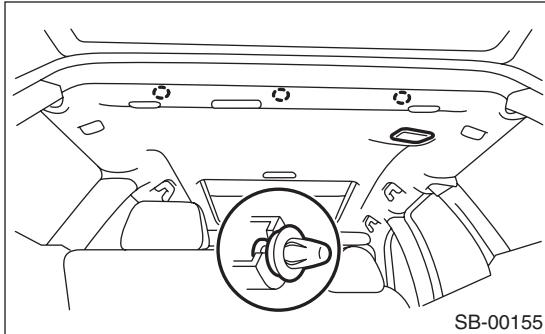


4) Remove the bolt to remove the seat belt retractor.

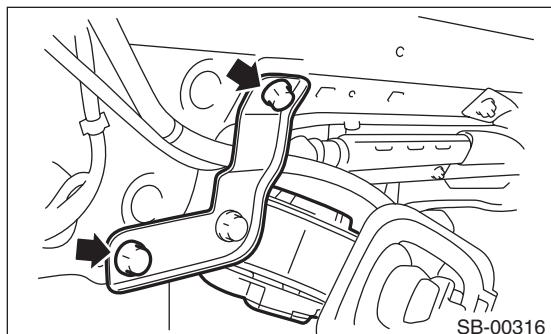


3. INNER SEAT BELT RH ASSEMBLY

- 1) Remove the RH second-row seat assembly.
<Ref. to SE-15, LH&CTR SEAT, REMOVAL, Second Seat.>
- 2) Remove the LH hinge outer cover.
- 3) Remove the bolt, and then detach the inner belt assembly.

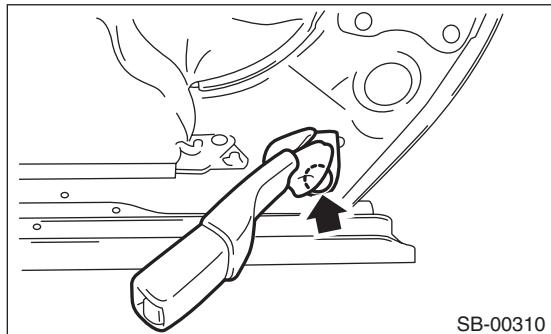


4. SHOULDER SEAT BELT CENTER BUCKLE

- 1) Remove the LH second-row seat assembly.
<Ref. to SE-15, LH&CTR SEAT, REMOVAL, Second Seat.>
- 2) Remove the RH hinge outer cover.
- 3) Remove the bolt, and then remove the shoulder seat belt center buckle.

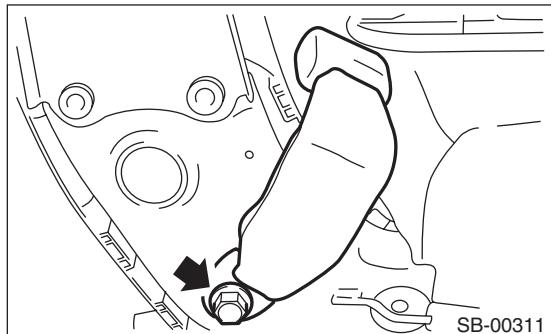

5. INNER SEAT BELT LH ASSEMBLY

- 1) Remove the LH second-row seat assembly.
<Ref. to SE-15, LH&CTR SEAT, REMOVAL, Second Seat.>
- 2) Remove the bolt from the back of the seat cushion, and then detach the inner belt assembly.

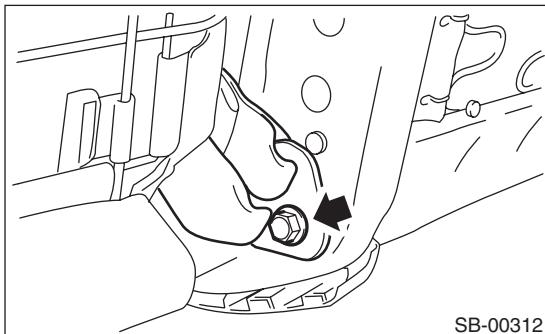

B: INSTALLATION

CAUTION:

When installing, be careful of the routing of the seat belt, and make sure that the belt is not twisted.

Install in the reverse order of removal.

C: INSPECTION

Check for the following, and replace with new parts if necessary.

- Seat belt is slackened, bent or worn. Seat belt is abnormally wound or extended.
- Inner belt is deformed or damaged.
- Seat belt buckle cannot be engaged properly.