


## 15. Front Hood Lock Assembly

### A: REMOVAL

- 1) Open the front hood.
- 2) Remove the engine front cover.
- 3) Remove the bolts, and then detach the front hood lock assembly.

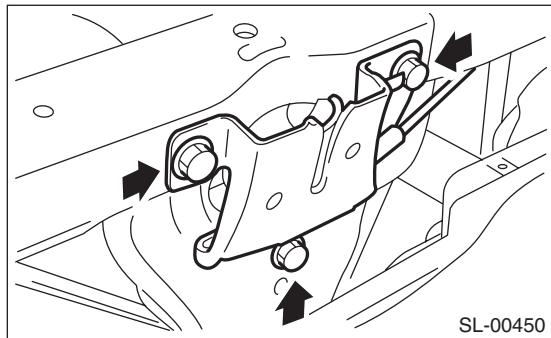

- 4) Remove the cable from lock assembly.

### B: INSTALLATION

Install in the reverse order of removal.

#### *Tightening torque:*


*<Ref. to SL-4, FRONT HOOD LOCK AND REMOTE OPENERS, COMPONENT, General Description.>*

#### NOTE:

Apply grease to the movable part.

### C: ADJUSTMENT

Loosen the bolt, and adjust the lock assembly while moving it up and down.

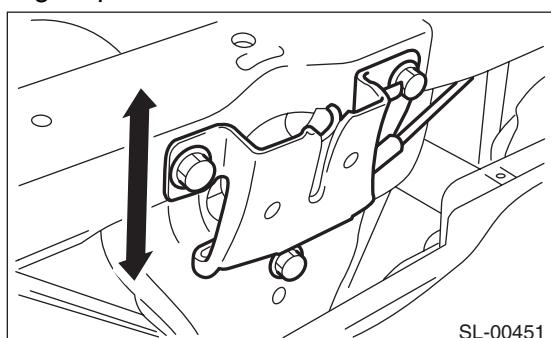

### D: INSPECTION

- 1) Check the striker for deformation or abnormal wear.
- 2) Check the safety lever for improper movement.
- 3) Check other levers and springs for rust formation or unsmooth movement.