


21. Keyless Entry Control Module

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the glove box. <Ref. to EI-39, REMOV-AL, Glove Box.>
- 3) Remove the nut, disconnect the connector and remove the keyless entry control module.

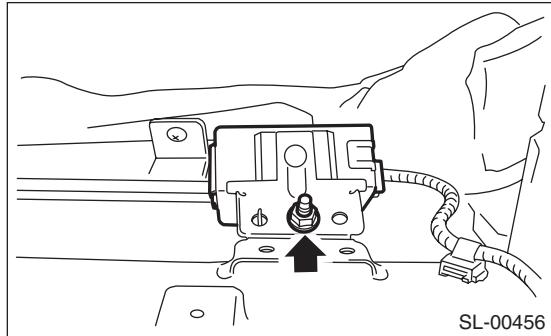

B: INSTALLATION

Install in the reverse order of removal.