

25. Immobilizer Control Module

A: NOTE

The control of immobilizer system is carried out in body integrated unit. Refer to the section of body integrated unit for work.

- Removal <Ref. to SL-48, REMOVAL, Body Integrated Unit.>
- Installation <Ref. to SL-48, INSTALLATION, Body Integrated Unit.>