


4. Sunroof Assembly

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the roof trim. *<Ref. to EI-52, REMOVAL, Roof Trim.>*
- 3) Disconnect the harness connector of sunroof motor.
- 4) Remove the glass lid. *<Ref. to SR-5, REMOVAL, Glass Lid.>*
- 5) Remove the drain tube from frame assembly.
- 6) Remove the bolts, and then detach the frame assembly.

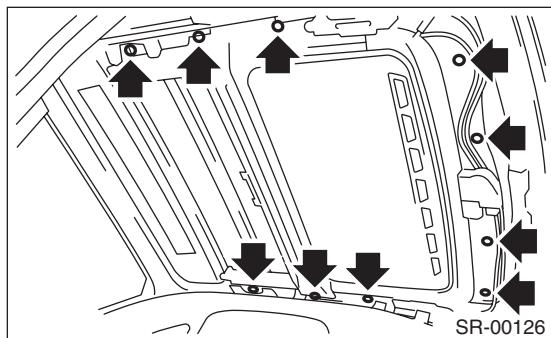

B: INSTALLATION

CAUTION:

Be careful not to snag the harness.


Install in the reverse order of removal.

NOTE:

- Be sure to connect the harness connector.
- When installing the drain tube, insert it securely into drain pipe.

Length A:

15 mm (0.59 in) or more

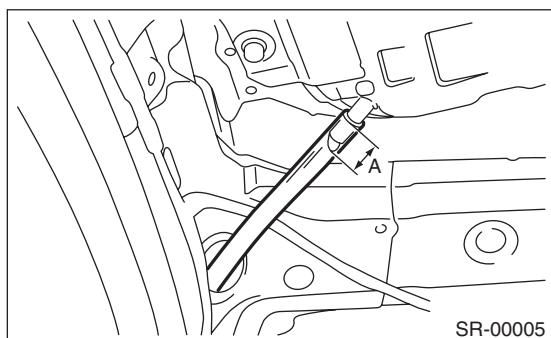

C: DISASSEMBLY

- 1) Remove the sunroof motor. *<Ref. to SR-8, REMOVAL, Sunroof Motor.>*
- 2) Remove the sunshade. *<Ref. to SR-11, REMOVAL, Sunshade.>*

D: ASSEMBLY

Assemble in the reverse order of disassembly.