



7. Sunshade

A: REMOVAL

- 1) Remove the glass lid. <Ref. to SR-5, REMOVAL, Glass Lid.>
- 2) Loosen the TORX® bolt to remove the front sunshade bracket.

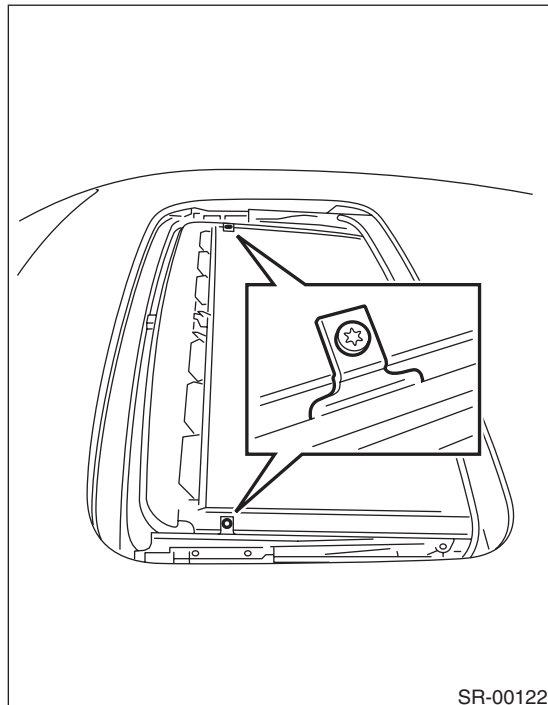

- 3) Pull the sunshade until the rear sunshade bracket comes into the sight, then loosen the TORX® bolts to remove the sunshade.

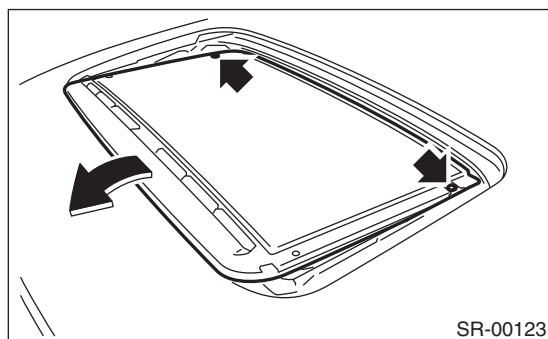


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1. CHECK FOR MOVING LOAD OF SUNSHADE

- 1) Attach a spring scale to sunshade edge using a cloth.

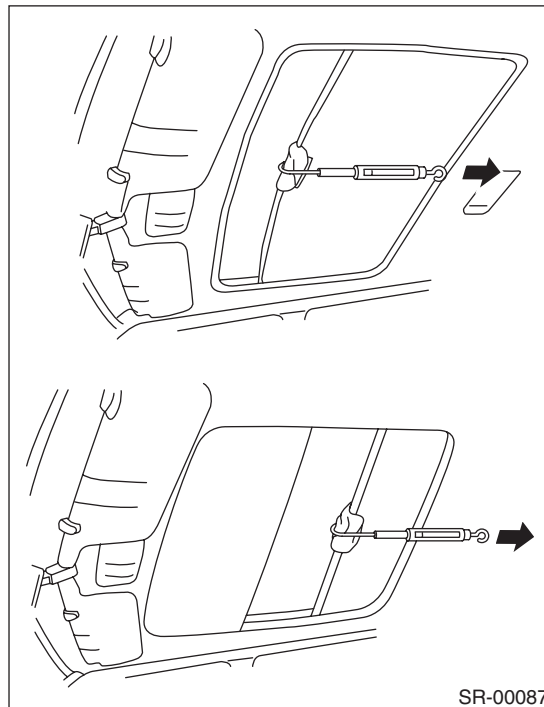

- 2) Pull the spring scale to measure moving load of the sunshade.

Moving load of sunshade:

Specification

$18.0 \pm 5.0 \text{ N}$ ($1.8 \pm 0.5 \text{ kgf}$, $13 \pm 3.7 \text{ lbf}$)

NOTE:

Moving load is larger at the beginning of pulling a spring scale, so take a spring scale reading while sunshade sliding smoothly.

- 3) If moving load exceeds specifications, check the glass lid, sunshade and frame assembly for improper installation.

Sunshade

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

EXTERIOR/INTERIOR TRIM



	Page
1. General Description	2
2. Front Under Cover	18
3. Fuel Tank Protector	19
4. Mud Guard	20
5. Front Grille	21
6. Front Bumper	22
7. Rear Bumper	29
8. Cowl Panel	30
9. Roof Spoiler	31
10. Side Garnish	32
11. Roof Molding	35
12. Roof Rail	36
13. Door Trim	37
14. Instrument Panel Lower Cover	38
15. Glove Box	39
16. Console Box	40
17. Center Console	41
18. Instrument Panel Assembly	42
19. Side Trim	45
20. Rear Quarter Trim	47
21. Floor Mat	49
22. Sun Visor	50
23. Assist Grip	51
24. Roof Trim	52
25. Rear Gate Trim	53
26. Heat Shield Cover	54
27. Trailer Hitch	55