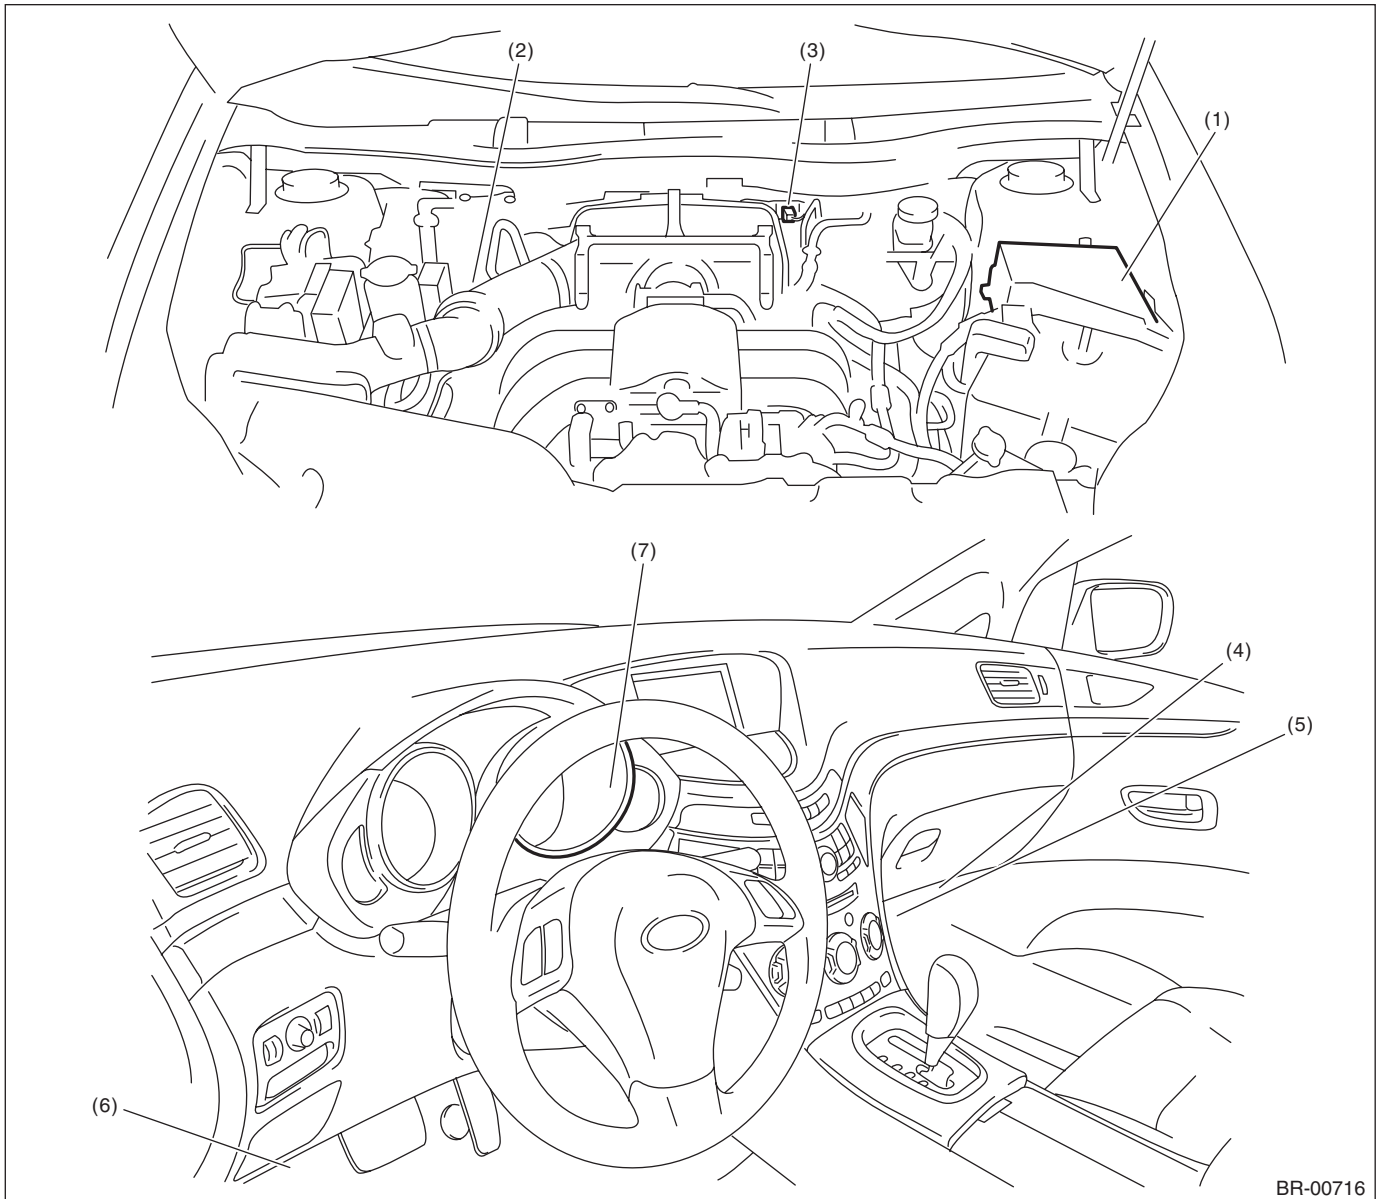


Electrical Component Location

BRAKE VACUUM CONTROL (BVC) (DIAGNOSTICS)

4. Electrical Component Location

A: LOCATION

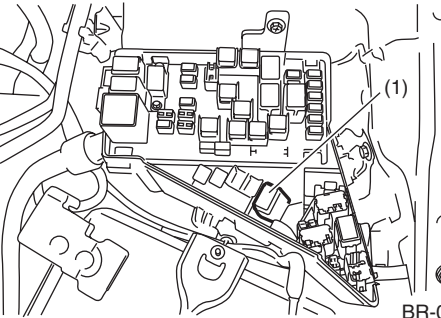
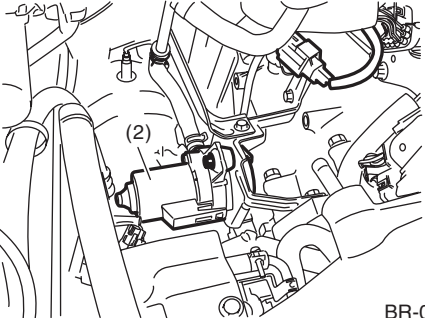
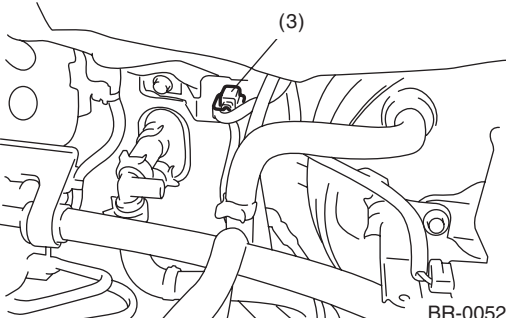
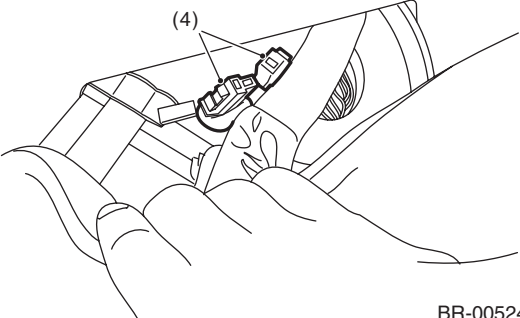
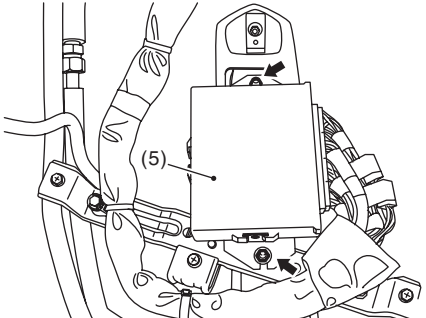
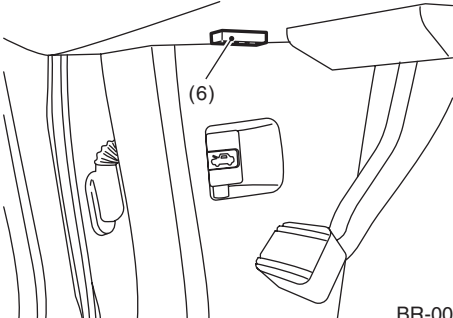
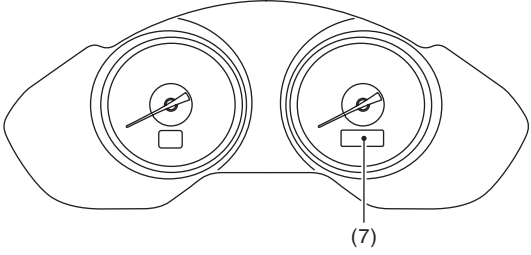


BR-00716

- | | | |
|-----------------------------|------------------------------------|-------------------------|
| (1) Brake vacuum pump relay | (4) Delivery (test) mode connector | (6) Data link connector |
| (2) Brake vacuum pump | (5) Engine control module (ECM) | (7) Odo/trip meter |
| (3) Brake vacuum sensor | | |

Electrical Component Location

BRAKE VACUUM CONTROL (BVC) (DIAGNOSTICS)

 BR-00797	 BR-00649
 BR-00523	 BR-00524
 BR-00525	 BR-00526
 BR-00527	