


## 6. Subaru Select Monitor

### A: OPERATION

#### 1. HOW TO USE THE SUBARU SELECT MONITOR

- 1) Prepare the Subaru Select Monitor kit. <Ref. to BVC(diag)-5, SPECIAL TOOL, PREPARATION TOOL, General Description.>

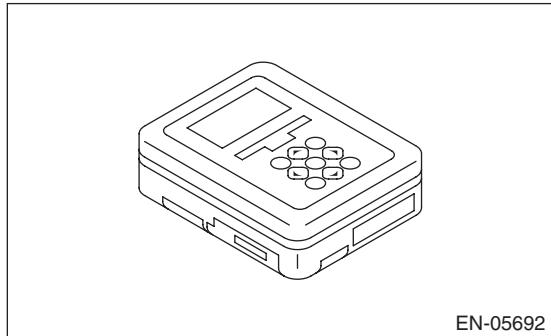

- 2) Prepare PC with Subaru Select Monitor installed.


- 3) Connect the USB cable to SDI (Subaru Diagnosis Interface) and USB port on the personal computer (dedicated port for the Subaru Select Monitor).

**NOTE:**

The dedicated port for the Subaru Select Monitor means the USB port which was used to install the Subaru Select Monitor.

- 4) Connect the diagnosis cable to SDI.

- 5) Connect SDI to data link connector located in the lower portion of the instrument panel (on the driver's side).

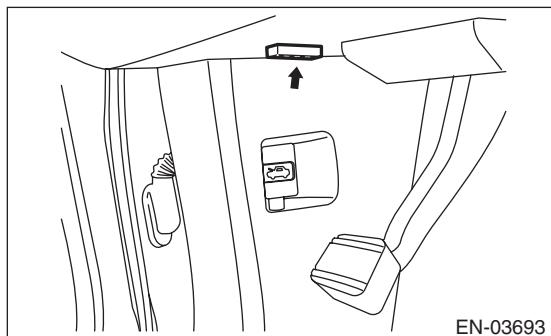

**CAUTION:**

**Do not connect the scan tools other than the Subaru Select Monitor.**

- 6) Start the PC.

- 7) Turn the ignition switch to ON (engine OFF) and run the "PC application for Subaru Select Monitor".

**NOTE:**

For details concerning the operation procedure, refer to "PC application help for Subaru Select Monitor".

- 8) Record the DTC and data.

# Subaru Select Monitor

## BRAKE VACUUM CONTROL (BVC) (DIAGNOSTICS)

### 2. READ CURRENT DATA

- 1) On «Main Menu» display, select {Each System Check}.
- 2) On «System Selection Menu» display, select {Brake Vacuum Pump System}.
- 3) Click on the [OK] after the {3.6 DOHC} is displayed.
- 4) On the «Brake Vacuum Pump Sys Diagnosis Menu» display screen, select the {Current Data Display & Save}.
- 5) On «Data Display Menu» display, select {Data Display}.
- 6) Using the scroll key, scroll the display screen up or down until necessary data is shown.

- A list of the support data is shown in the following table.


Display	Contents to be displayed	Unit of measure
Atmosphere Pressure	Atmospheric pressure is displayed.	mmHg, kPa or psig
Brake Booster Pressure	Brake booster pressure is displayed.	mmHg, kPa or psig
Test Mode Signal	Connection status of test mode terminal is displayed.	D check or U check
Vacuum Pump Motor	Operation status of vacuum pump motor is displayed.	ON or OFF
Vacuum Pump Motor Relay	Operation status of vacuum pump motor relay is displayed.	ON or OFF

#### NOTE:

For details concerning the operation procedure, refer to “PC application help for Subaru Select Monitor”.

### 3. SEQUENCE CONTROL MODE

- 1) Connect the delivery (test) mode connector located under the glove box.

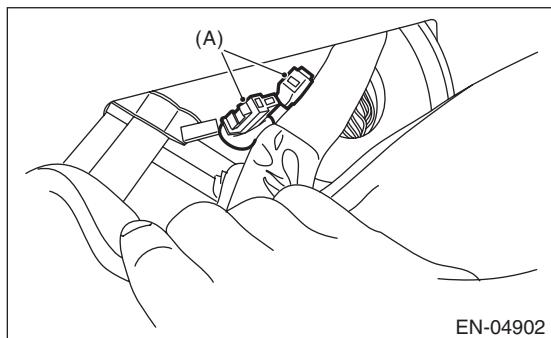

(A) Delivery (test) mode connector

- 2) Turn the ignition switch to ON (engine OFF) and run the Subaru Select Monitor.
- 3) On «Main Menu» display, select {Each System Check}.
- 4) On «System Selection Menu» display, select {Brake Vacuum Pump System}.
- 5) Click on the [OK] after the {3.6 DOHC} is displayed.
- 6) On the «Brake Vacuum Pump Sys Diagnosis Menu» display screen, select the {Function Check Mode}.
- 7) When «Sequence Control Mode will be started» is shown on the screen, click the [OK] button.
- 8) When «Depress Brake Pedal Five Times» is shown on the screen, depress the brake pedal 5 times, and click the [OK] button while the brake pedal is not depressed.
- 9) Click the [OK] button after the «OK» is displayed.