

### 7. Read Diagnostic Trouble Code (DTC)

#### A: OPERATION

- 1) On the «Main Menu» display, select {Each System Check}.
- 2) On the «System Selection Menu» display screen, select the {Brake Vacuum Pump System}.
- 3) Click the [OK] button after the {3.6 DOHC} is displayed.
- 4) On the «Brake Vacuum Pump Sys Diagnosis Menu» display screen, select the {Diagnostic Code(s) Display}.
- 5) Record the DTC and data.

#### NOTE:

- For details concerning the operation procedure, refer to the “PC application help for Subaru Select Monitor”.
- For details concerning DTCs, refer to “List of Diagnostic Trouble Code (DTC)”. <Ref. to BVC(diag)-14, List of Diagnostic Trouble Code (DTC).>