

6. Rear Differential Side Oil Seal

A: INSPECTION

Make sure that there is no leakage from side oil seal. If there is any leakage, replace the oil seal.

B: REPLACEMENT

1) Remove the rear differential. <Ref. to DI-19, REMOVAL, Rear Differential (VA-type).>

2) Remove the rear differential side oil seal using a ST or screwdriver wrapped with vinyl tape to prevent the side retainer from scratching.


ST 398527700 PULLER ASSY

3) Using the ST, install the oil seal to the side retainer.

NOTE:

- Use a new oil seal.
- Apply differential gear oil to the oil seal lips.

ST 398437700 DRIFT

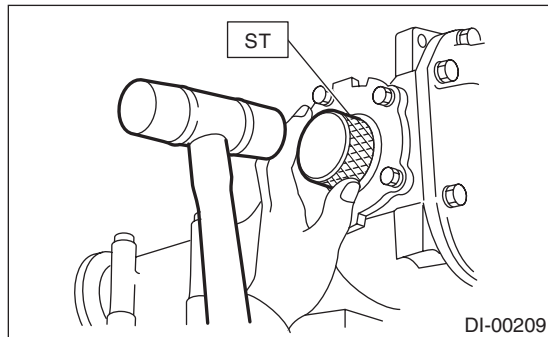

4) Install the rear differential. <Ref. to DI-20, INSTALLATION, Rear Differential (VA-type).>