

## List of Diagnostic Trouble Code (DTC)

### TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

## 10. List of Diagnostic Trouble Code (DTC)

### A: LIST

| DTC | Item                                 | Contents of diagnosis                   | Remarks   |
|-----|--------------------------------------|---|---|
| 11  | Tire 1 Air Pressure Decrease         | FL tire pressure is reduced.            | <Ref. to TPM(diag)-24, DTC 11 TIRE 1 AIR PRESSURE DECREASE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>         |
| 12  | Tire 2 Air Pressure Decrease         | FR tire pressure is reduced.            | <Ref. to TPM(diag)-24, DTC 12 TIRE 2 AIR PRESSURE DECREASE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>         |
| 13  | Tire 3 Air Pressure Decrease         | RR tire pressure is reduced.            | <Ref. to TPM(diag)-24, DTC 13 TIRE 3 AIR PRESSURE DECREASE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>         |
| 14  | Tire 4 Air Pressure Decrease         | RL tire pressure is reduced.            | <Ref. to TPM(diag)-25, DTC 14 TIRE 4 AIR PRESSURE DECREASE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>         |
| 21  | Transmitter 1 No Data                | Data cannot be received from FL sensor. | <Ref. to TPM(diag)-25, DTC 21 TRANSMITTER 1 NO DATA, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>                |
| 22  | Transmitter 2 No Data                | Data cannot be received from FR sensor. | <Ref. to TPM(diag)-25, DTC 22 TRANSMITTER 2 NO DATA, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>                |
| 23  | Transmitter 3 No Data                | Data cannot be received from RR sensor. | <Ref. to TPM(diag)-25, DTC 23 TRANSMITTER 3 NO DATA, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>                |
| 24  | Transmitter 4 No Data                | Data cannot be received from RL sensor. | <Ref. to TPM(diag)-26, DTC 24 TRANSMITTER 4 NO DATA, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>                |
| 31  | Transmitter 1 Pressure Data Abnormal | FL sensor data contents are abnormal.   | <Ref. to TPM(diag)-27, DTC 31 TRANSMITTER 1 PRESSURE DATA ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 32  | Transmitter 2 Pressure Data Abnormal | FR sensor data contents are abnormal.   | <Ref. to TPM(diag)-27, DTC 32 TRANSMITTER 2 PRESSURE DATA ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 33  | Transmitter 3 Pressure Data Abnormal | RR sensor data contents are abnormal.   | <Ref. to TPM(diag)-27, DTC 33 TRANSMITTER 3 PRESSURE DATA ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 34  | Transmitter 4 Pressure Data Abnormal | RL sensor data contents are abnormal.   | <Ref. to TPM(diag)-28, DTC 34 TRANSMITTER 4 PRESSURE DATA ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 41  | Transmitter 1 Function Code Abnormal | Function code has error.                | <Ref. to TPM(diag)-29, DTC 41 TRANSMITTER 1 FUNCTION CODE ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |

# List of Diagnostic Trouble Code (DTC)

## TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

| DTC | Item                                   | Contents of diagnosis   | Remarks   |
|-----|--|---|---|
| 42  | Transmitter 2 Function Code Abnormal   | Function code has error.  | <Ref. to TPM(diag)-29, DTC 42 TRANSMITTER 2 FUNCTION CODE ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>   |
| 43  | Transmitter 3 Function Code Abnormal   | Function code has error.  | <Ref. to TPM(diag)-29, DTC 43 TRANSMITTER 3 FUNCTION CODE ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>   |
| 44  | Transmitter 4 Function Code Abnormal   | Function code has error.  | <Ref. to TPM(diag)-30, DTC 44 TRANSMITTER 4 FUNCTION CODE ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>   |
| 51  | Transmitter 1 Battery Voltage Decrease | Transmitter battery voltage is low.   | <Ref. to TPM(diag)-31, DTC 51 TRANSMITTER 1 BATTERY VOLTAGE DECREASE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 52  | Transmitter 2 Battery Voltage Decrease | Transmitter battery voltage is low.   | <Ref. to TPM(diag)-31, DTC 52 TRANSMITTER 2 BATTERY VOLTAGE DECREASE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 53  | Transmitter 3 Battery Voltage Decrease | Transmitter battery voltage is low.   | <Ref. to TPM(diag)-31, DTC 53 TRANSMITTER 3 BATTERY VOLTAGE DECREASE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 54  | Transmitter 4 Battery Voltage Decrease | Transmitter battery voltage is low.   | <Ref. to TPM(diag)-32, DTC 54 TRANSMITTER 4 BATTERY VOLTAGE DECREASE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| 61  | Vehicle Speed is Abnormal              | Vehicle speed signal is not input to the control module when the vehicle speed is 6 km/h (3.7 MPH) or more. | <Ref. to TPM(diag)-33, DTC 61 VEHICLE SPEED IS ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>              |