

### 3. Rear Catalytic Converter

#### A: REMOVAL

The rear catalytic converter is integrated into the front exhaust pipe; therefore, refer to "Front Exhaust Pipe" for the removal procedure. <Ref. to EX(H6DO)-5, REMOVAL, Front Exhaust Pipe.>

#### B: INSTALLATION

The rear catalytic converter is integrated into the front exhaust pipe; therefore, refer to "Front Exhaust Pipe" for the installation procedure. <Ref. to EX(H6DO)-5, INSTALLATION, Front Exhaust Pipe.>

#### C: INSPECTION

- 1) Check the connections and welds for exhaust leaks.
- 2) Make sure there are no holes or rusting.