

4. Muffler


A: REMOVAL

CAUTION:


Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.

- 1) Lift up the vehicle.
- 2) Remove the muffler from rear exhaust pipe.

- LH side

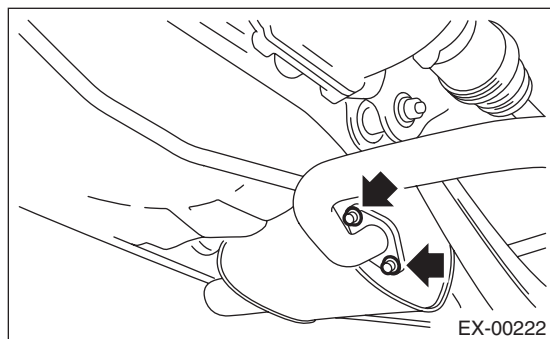

- RH side

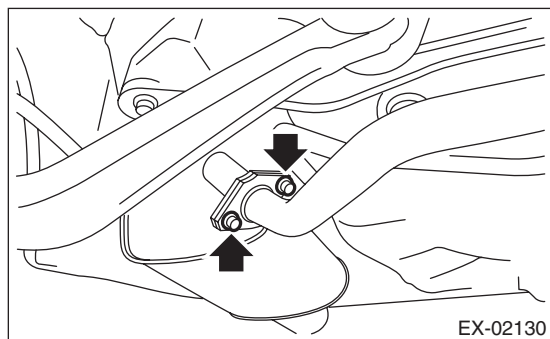


- 3) Apply a coat of spray type lubricant to the mating area of cushion rubber.

- 4) Remove the muffler from the cushion rubber.


CAUTION:

Be careful not to drop the muffler during removal.

- LH side

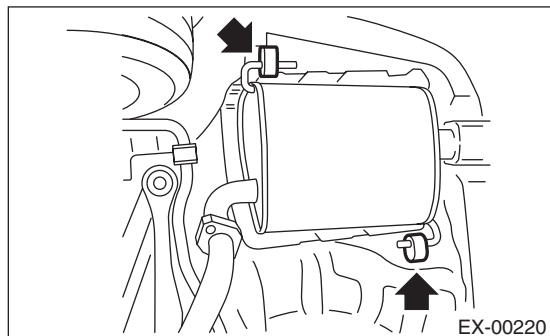

- RH side

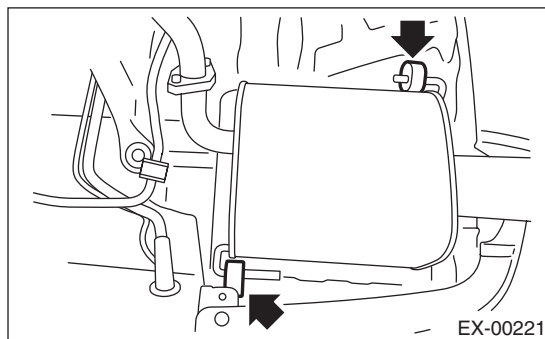

B: INSTALLATION

Install in the reverse order of removal.


NOTE:

- Use a new gasket and self-locking nut.
- After assembling, degrease the lubricant which was applied to the cushion rubber while removing/installing.


Tightening torque:

48 N·m (4.9 kgf-m, 35.4 ft-lb)

- LH side

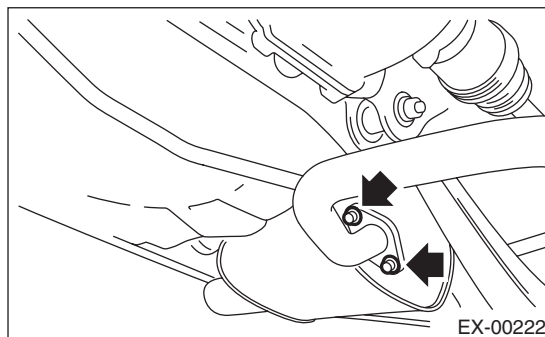

- RH side

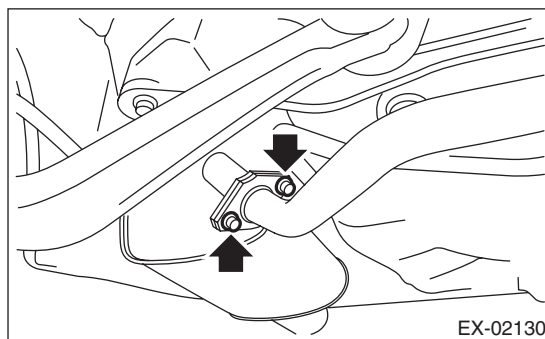

C: INSPECTION

- 1) Check the connections and welds for exhaust leaks.
- 2) Make sure there are no holes or rusting.
- 3) Check the cushion rubber for wear or crack.

Muffler

EXHAUST

COOLING

CO(H6DO)

	Page
1. General Description	2
2. Radiator Fan System	9
3. Engine Coolant	12
4. Water Pump	14
5. Thermostat	15
6. Radiator	17
7. Radiator Cap	22
8. Radiator Main Fan and Fan Motor	23
9. Radiator Sub Fan and Fan Motor	27
10. Reservoir Tank	28
11. Radiator Fan Control Unit	31
12. Engine Cooling System Trouble in General	32