


14. Oil Temperature Sensor

A: REMOVAL

- 1) Remove the collector cover.
- 2) Disconnect the ground cable from battery.
- 3) Disconnect the connector from oil temperature sensor.

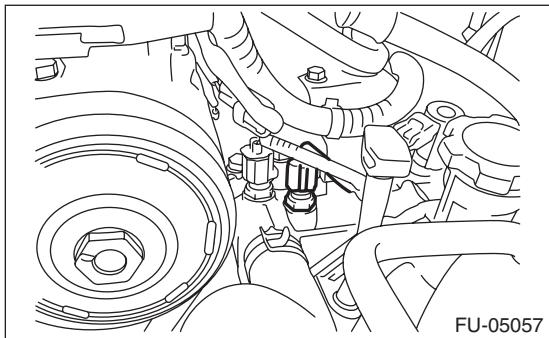

- 4) Remove the oil temperature sensor.

B: INSTALLATION


Install in the reverse order of removal.

Tightening torque:

18 N·m (1.8 kgf·m, 13.3 ft-lb)

C: INSPECTION

- 1) Check that the oil temperature sensor has no deformation, cracks or other damages.
- 2) Check the resistance between the oil temperature sensor terminals.

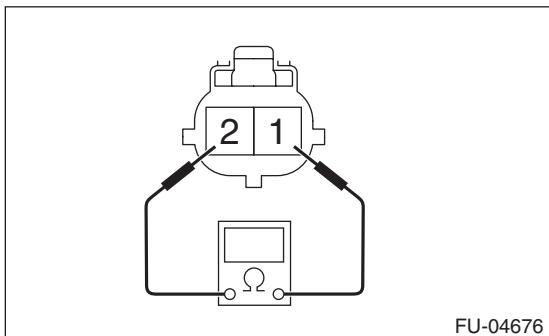

Terminal No.	Standard
1 and 2	$2.45 \pm 0.2 \Omega$ (when 20°C (68°F))