


## 21. Fuel Pump Control Unit

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear quarter trim (right side). <Ref. to EI-47, REMOVAL, Rear Quarter Trim.>
- 3) Disconnect the connector from fuel pump control unit.
- 4) Remove the fuel pump control unit.

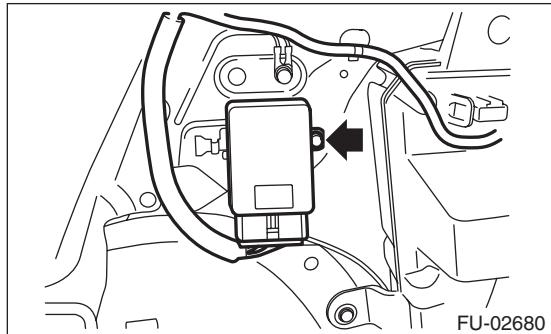

### B: INSTALLATION

Install in the reverse order of removal.

#### *Tightening torque:*

13 N·m (1.3 kgf·m, 9.6 ft-lb)

### C: INSPECTION

Check that the fuel pump control unit has no deformation, cracks or other damages.