

## 6. Resonator Chamber

### A: REMOVAL


The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to "Air Cleaner Case" for the removal procedure. <Ref. to IN(H6DO)-6, REMOVAL, Air Cleaner Case.>

### B: INSTALLATION

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to "Air Cleaner Case" for installation procedure. <Ref. to IN(H6DO)-7, INSTALLATION, Air Cleaner Case.>

### C: DISASSEMBLY

- 1) Remove the clip which connects the resonator chamber and the air cleaner case (front).

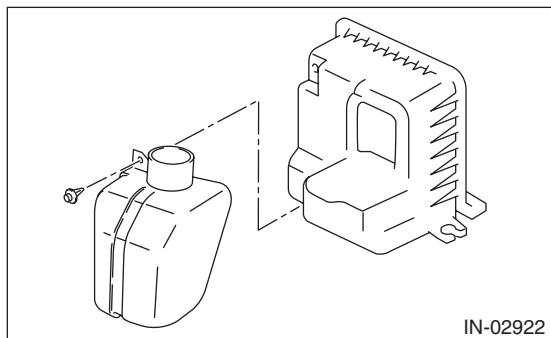

- 2) Separate the resonator chamber and the air cleaner case (front).

### D: ASSEMBLY

Assemble in the reverse order of disassembly.

### E: INSPECTION

Check that the resonator chamber has no deformation, cracks or other damages.

# MECHANICAL

# *ME(H6DO)*

---

	Page
1. General Description .....	2
2. Compression .....	26
3. Idle Speed .....	27
4. Ignition Timing .....	28
5. Intake Manifold Vacuum .....	29
6. Engine Oil Pressure .....	30
7. Fuel Pressure .....	31
8. Valve Clearance .....	32
9. Engine Assembly .....	36
10. Engine Mounting .....	44
11. Preparation for Overhaul .....	45
12. V-belt .....	46
13. Crank Pulley .....	47
14. Chain Cover .....	48
15. Timing Chain Assembly .....	54
16. Cam Sprocket .....	74
17. Crank Sprocket .....	75
18. Camshaft .....	76
19. Cylinder Head .....	85
20. Cylinder Block .....	98
21. Oil Flow Control Solenoid Valve .....	121
22. Intake and Exhaust Valve .....	122
23. Piston .....	123
24. Connecting Rod .....	124
25. Crankshaft .....	125
26. Engine Trouble in General .....	126
27. Engine Noise .....	132