

## 21.Oil Flow Control Solenoid Valve

### A: REMOVAL

The oil flow control solenoid valve is listed in the FU section. <Ref. to FU(H6DO)-48, REMOVAL, Oil Flow Control Solenoid Valve.>

### B: INSTALLATION

The oil flow control solenoid valve is listed in the FU section. <Ref. to FU(H6DO)-48, INSTALLATION, Oil Flow Control Solenoid Valve.>