

## 24. Connecting Rod

### A: SPECIFICATION

Refer to "Cylinder Block" for removal and installation procedures of connecting rod. <Ref. to ME(H6DO)-98, REMOVAL, Cylinder Block.> <Ref. to ME(H6DO)-104, INSTALLATION, Cylinder Block.>