



15.Rear Vehicle Speed Sensor

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Lift up the vehicle.
- 3) Clean the transmission exterior.
- 4) Remove the bolts which connect the front exhaust pipe and rear exhaust pipe.
- 5) Remove the bolts holding the heat shield cover, and move the heat shield cover to the rear.
- 6) Disconnect the rear vehicle speed sensor connector.

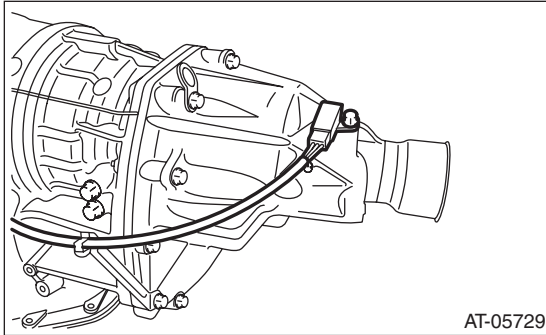

- 7) Remove the rear vehicle speed sensor.

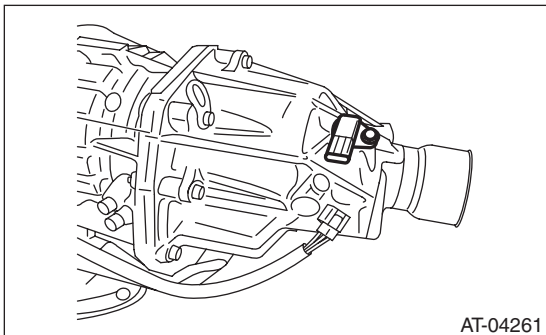

B: INSTALLATION


- 1) Install the rear vehicle speed sensor.

NOTE:


Use new O-rings.

Tightening torque:

7 N·m (0.7 kgf-m, 5.2 ft-lb)

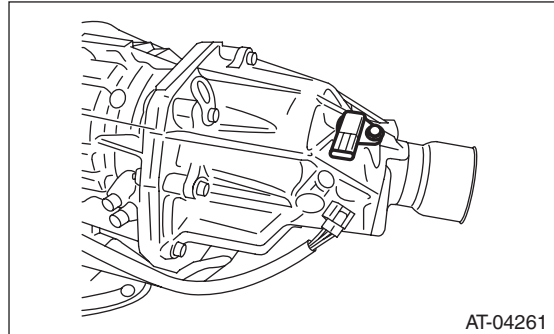

- 2) Connect the rear vehicle speed sensor connector.

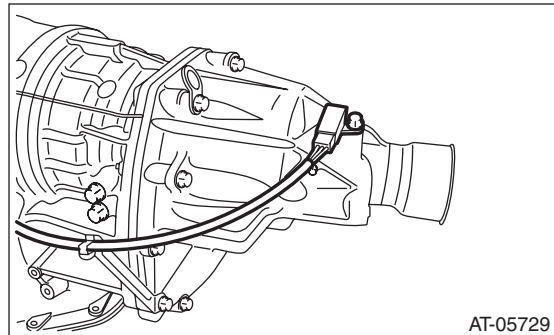

- 3) Install the heat shield cover. <Ref. to EI-54, INSTALLATION, Heat Shield Cover.>

- 4) Tighten the bolts which connect the front exhaust pipe and rear exhaust pipe.

Tightening torque:

18 N·m (1.8 kgf-m, 13.3 ft-lb)

- 5) Lower the vehicle.