


23. Drive Plate

A: REMOVAL

- 1) Remove the transmission assembly from the vehicle. <Ref. to 5AT-37, REMOVAL, Automatic Transmission Assembly.>
- 2) Use the ST to lock the crankshaft, and remove the drive plate and reinforcement drive plate.

ST 498497100 CRANKSHAFT STOPPER

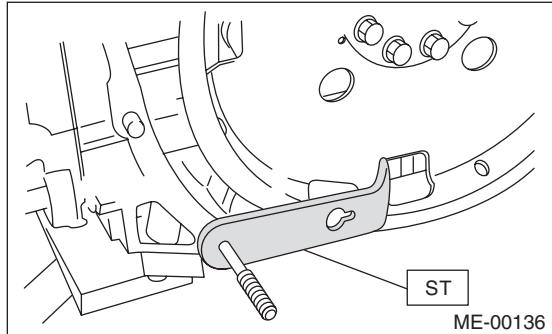


ME-00136

B: INSTALLATION

- 1) Temporarily install the drive plate and reinforcement drive plate.
- 2) Using the ST, lock the crankshaft.

ST 498497100 CRANKSHAFT STOPPER

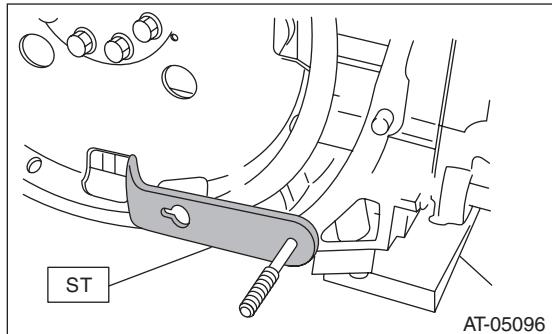

AT-05096

- 3) Tighten the drive plate mounting bolt.

NOTE:

Tighten the drive plate mounting bolts gradually. Each bolt should be tightened in a crisscross order.

Tightening torque:

90 N·m (9.2 kgf·m, 66.4 ft-lb)

- 4) Install the transmission assembly to the vehicle. <Ref. to 5AT-40, INSTALLATION, Automatic Transmission Assembly.>