

General Diagnostic Table

CONTROL SYSTEMS

7. General Diagnostic Table

A: INSPECTION

Symptom	Possible cause	Corrective action
Select lever	Starter does not run.	Adjust the select cable, or inspect circuit.
	Back-up light does not illuminate.	Adjust the select cable, or inspect circuit.
	AT shift lock system does not operate normally.	Adjust the select cable, or inspect circuit.
	Will not change to manual or sports mode.	Inspect the mode change switch and select lever, or inspect the circuit.
	Up-shift is not engaged at manual mode.	Check the shift-up switch and circuit.
	Down-shift is not engaged at manual mode.	Check the shift-down switch and circuit.

AUTOMATIC TRANSMISSION

5AT

	Page
1. General Description	2
2. Automatic Transmission Fluid	29
3. Differential Gear Oil	31
4. Road Test	32
5. Stall Test	33
6. Time Lag Test	34
7. Line Pressure Test	35
8. Transfer Clutch Pressure Test	36
9. Automatic Transmission Assembly	37
10. Transmission Mounting System	44
11. Extension Case Oil Seal	46
12. Differential Side Retainer Oil Seal	47
13. Inhibitor Switch	48
14. Front Vehicle Speed Sensor	49
15. Rear Vehicle Speed Sensor	51
16. Turbine Speed Sensor 1	52
17. Control Valve Body	53
18. Transmission Control Module (TCM)	55
19. ATF Cooler Pipe and Hose	56
20. Air Breather Hose	59
21. Oil Charge Pipe	60
22. Torque Converter Assembly	61
23. Drive Plate	62
24. Extension Case	63
25. Transfer Clutch	65
26. Rear Drive Shaft	68
27. Reduction Driven Gear	69
28. Center Differential Carrier	72
29. Parking Pawl	74
30. Converter Case	76
31. Oil Pump Cover	78
32. Drive Pinion Shaft Assembly	82
33. Front Differential Assembly	87
34. AT Main Case	93
35. Transmission Control Device	104
36. Diagnostics with Phenomenon	106