

60. Bulkhead Wiring Harness (In Engine Compartment)

A: LOCATION


Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
B3	5	Black	B-2		Mass air flow and intake air temperature sensor
B6	2	Gray	B-2		Front ABS wheel speed sensor RH
B8	5	Gray	B-4		Front wiper motor
B10	4	Gray	B-4		Pressure switch
B11	20	Gray	B-3	T4	Transmission harness
B12	8	Light gray	B-3	T3	
B14	1	Black	B-4		Starter motor
B15	2	Gray	B-4		Front ABS wheel speed sensor LH
B16	2	Gray	B-4		Brake fluid level switch
B21	54	Black	B-3	E2	Engine wiring harness
B22	16	Brown	B-3	E3	
B143	20	★	B-4		Main fuse box (M/B)
B144	9	Brown	B-4		
B145	7	Brown	B-4		
B146	6	Gray	C-4		Front washer motor & rear washer motor & washer level switch
B186	8	★	B-4		Main fuse box (M/B)
B310	34	Black	B-2		VDC control module
B329	2	Black	B-2		Hood switch
B360	16	Gray	B-4	F109	Through joint connector
B361	14	Gray	B-4	F108	
B407	2	Black	B-5		Puddle light LH
B409	4	Black	B-5		Wiper relay unit
B410	3	Dark gray	B-5		
B411	3	Black	B-4		Pressure sensor
B417	2	Dark gray	B-3		Vacuum pump
B422	4	Black	B-4		Vacuum pump relay
B430	2	Black	B-2		Puddle light RH
B432	8	Black	B-4		SBF holder
B433	2	★	B-4		Main fuse box (M/B)

★ : White or natural color

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB13	2	Yellow	C-3		Front sub sensor LH
AB16	2	Yellow	B-1		Front sub sensor RH

Bulkhead Wiring Harness (In Engine Compartment)

WIRING SYSTEM

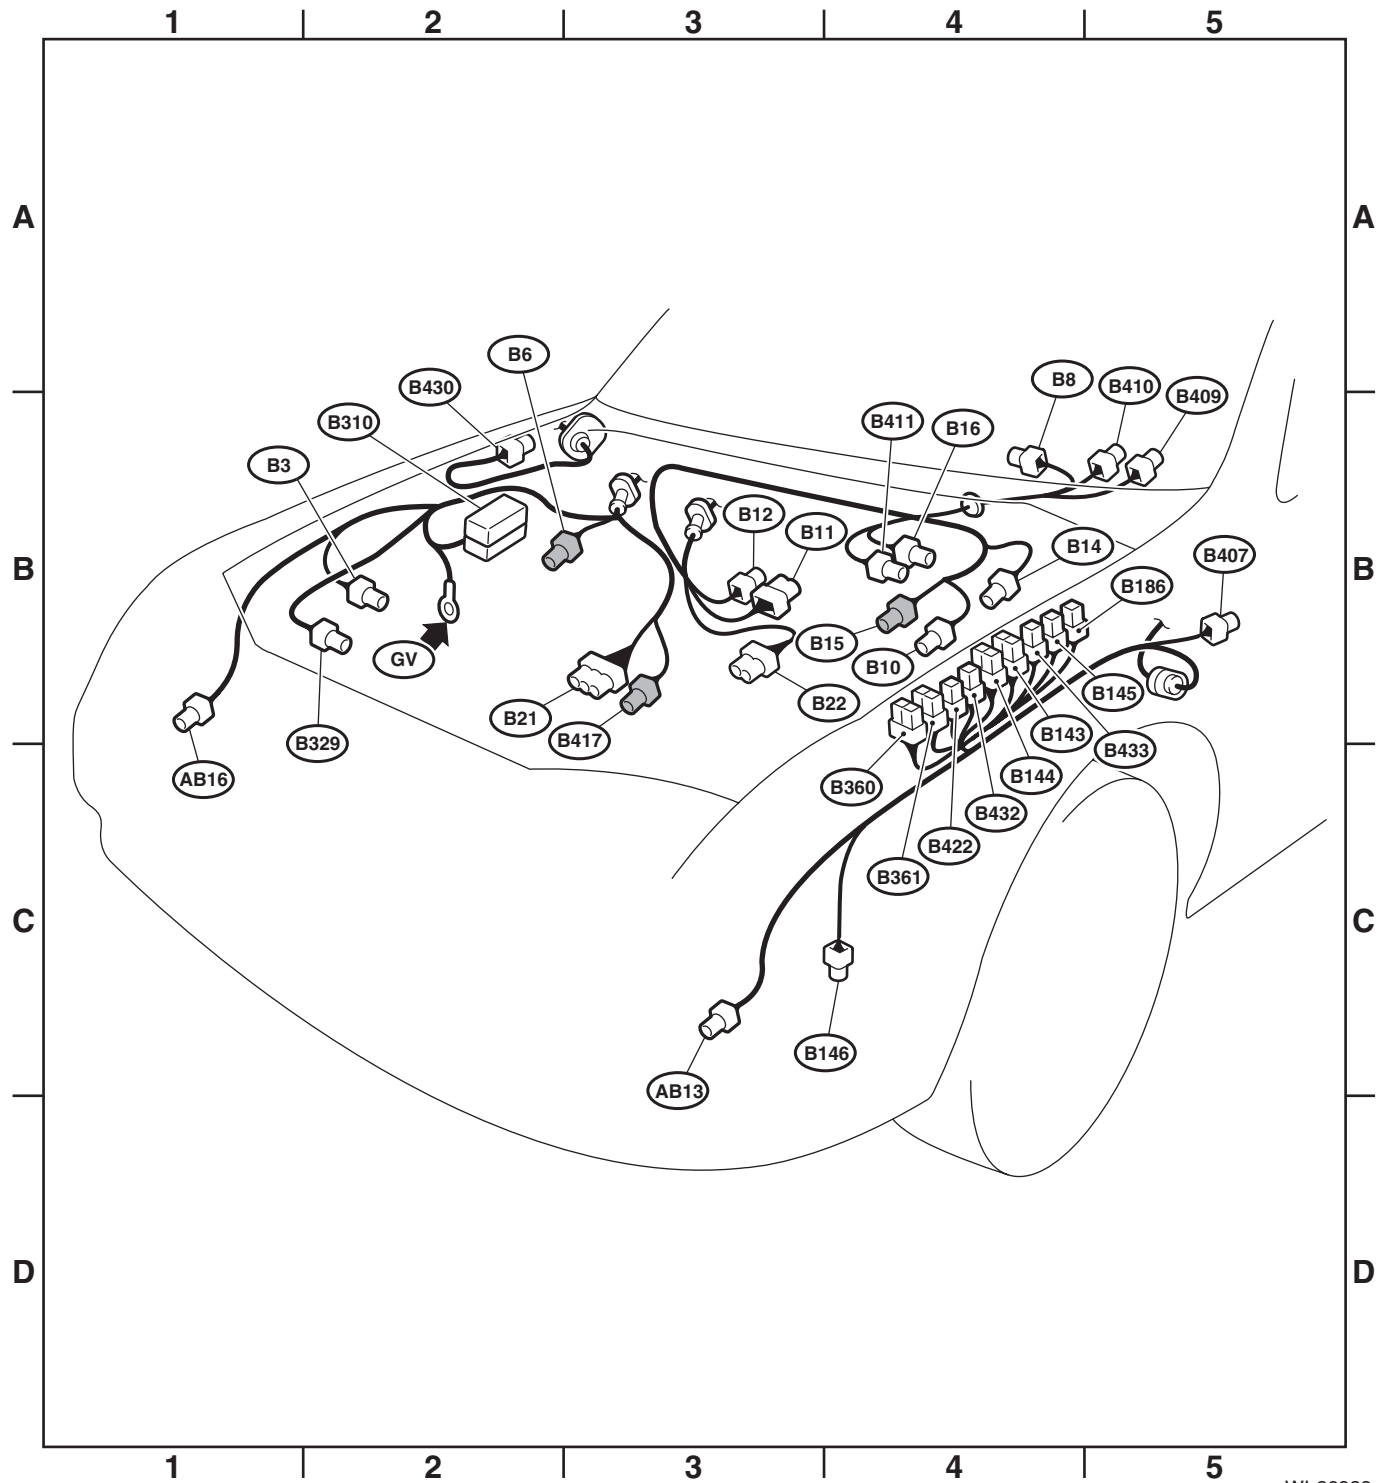

WI-26939