

PARKING LOCK PAWL


PARKING LOCK PAWL REMOVAL

1. REMOVE VALVE BODY

(See page [AT1-56](#))


2. REMOVE PARKING LOCK PAWL BRACKET

Remove the 3 bolts and the bracket.

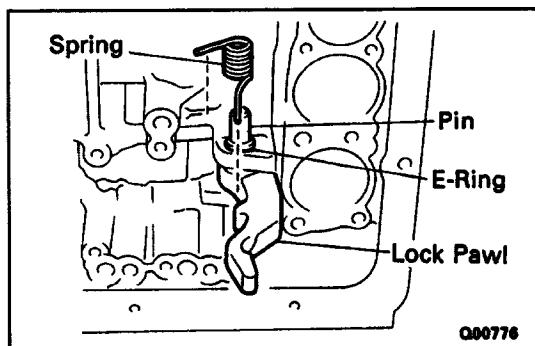

3. REMOVE SPRING FROM PARKING LOCK PAWL PIVOT PIN


4. REMOVE PIVOT PIN AND PARKING LOCK PAWL

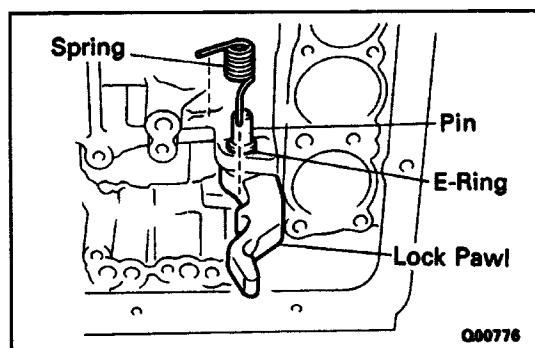

PARKING LOCK PAWL INSTALLATION

1. INSTALL PARKING LOCK PAWL AND PIVOT PIN

2. INSTALL SPRING

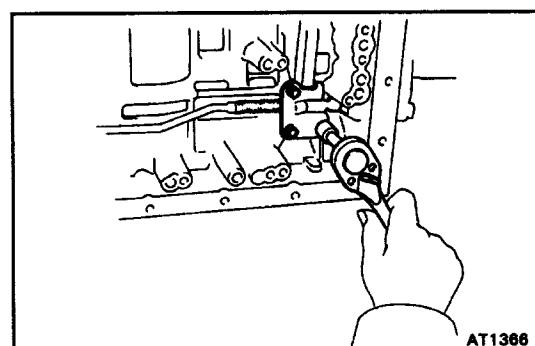

3. INSTALL PARKING LOCK PAWL BRACKET

(a) Push lock rod fully toward.

(b) Install 3 bolts finger tight.

(c) Check that the pawl operates smoothly.

(d) Torque the bolts.

Torque: 7.4 N·m (75 kgf·cm, 65 in-lbf)

4. INSTALL VALVE BODY

(See page [AT1-58](#))