
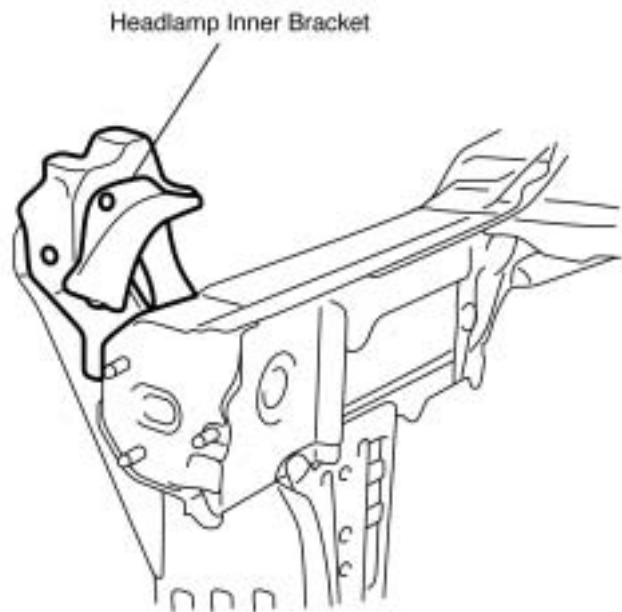


## RADIATOR SUPPORT (ASSY) REPLACEMENT

### 1. REMOVE RADIATOR SUPPORT

- (a) Replace the headlamp inner bracket at the same time.

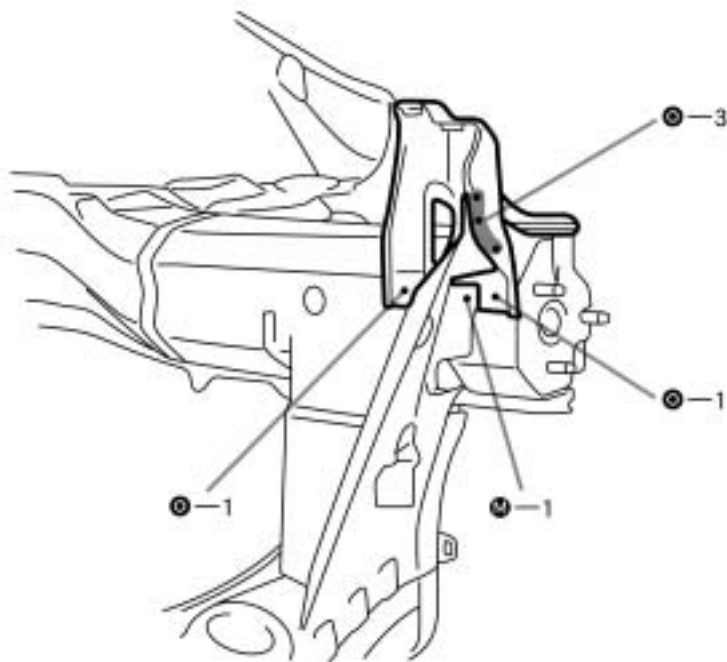


## 2. INSTALL RADIATOR SUPPORT

- (a) Temporarily install the new parts and measure each part in accordance with the body dimension diagram.

HINT:

First install the radiator upper support.

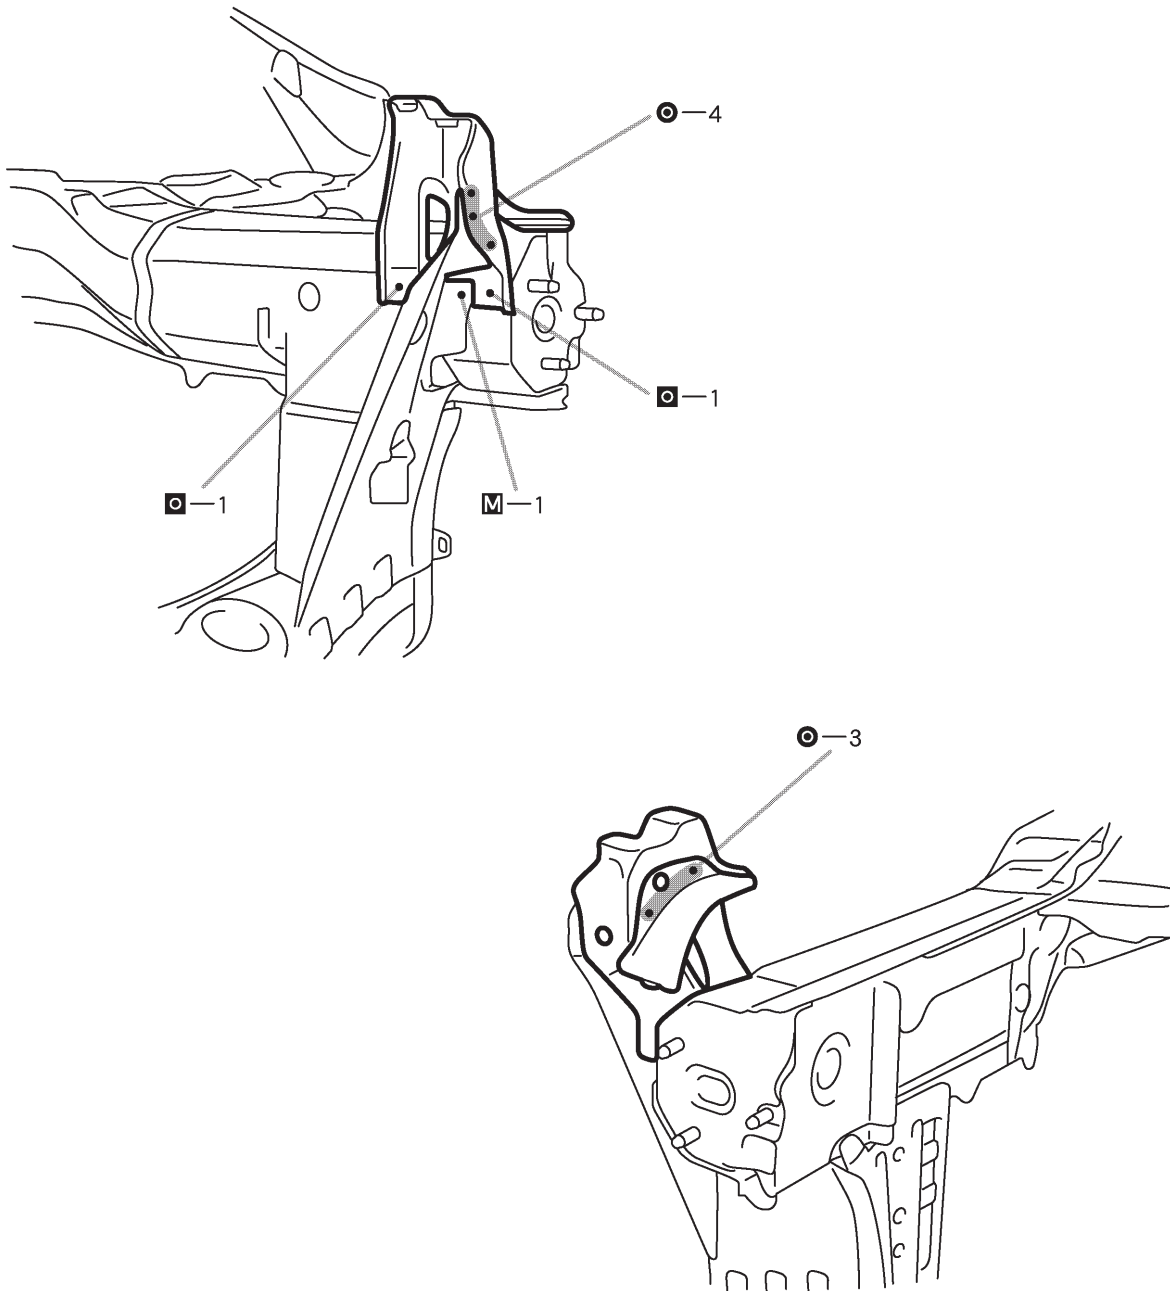

F10302

## 3. MEASURING THE ENGINE COMPARTMENT DIMENSIONS ([See page BP-72](#))

## 4. APPLYING ANTI-RUST AGENT

- (a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.