
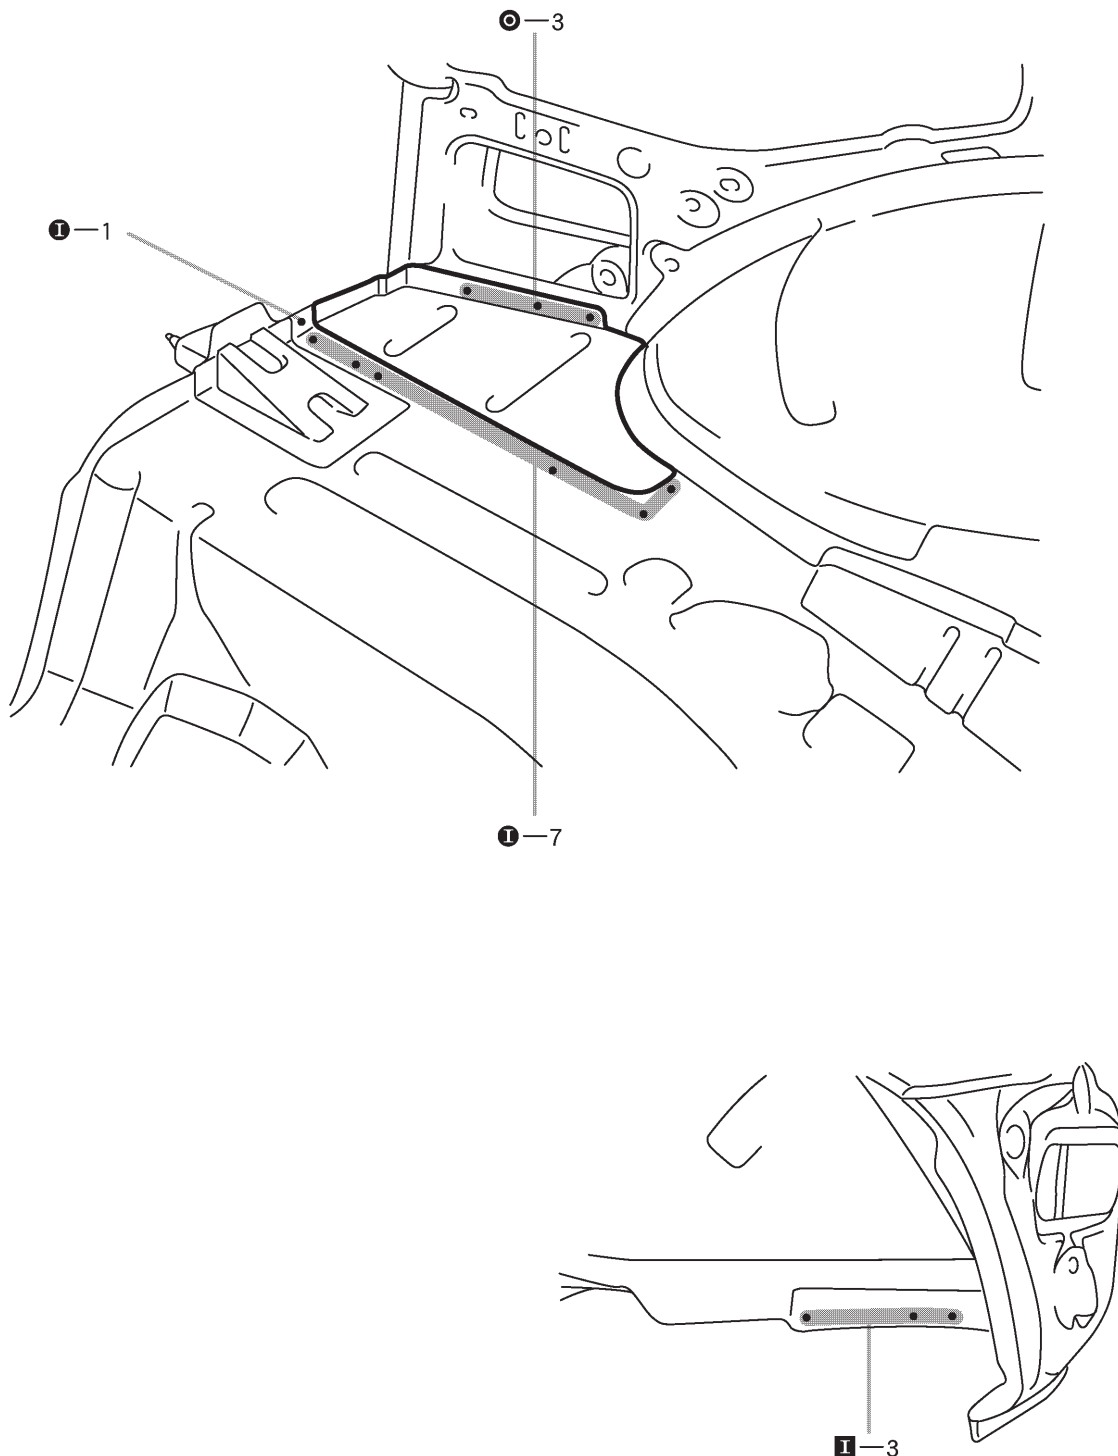


REAR FLOOR PAN EXTENSION (ASSY) REPLACEMENT

1. REMOVE BODY LOWER BACK PANEL ([See page BP-49](#))
2. REMOVE REAR FLOOR PAN EXTENSION

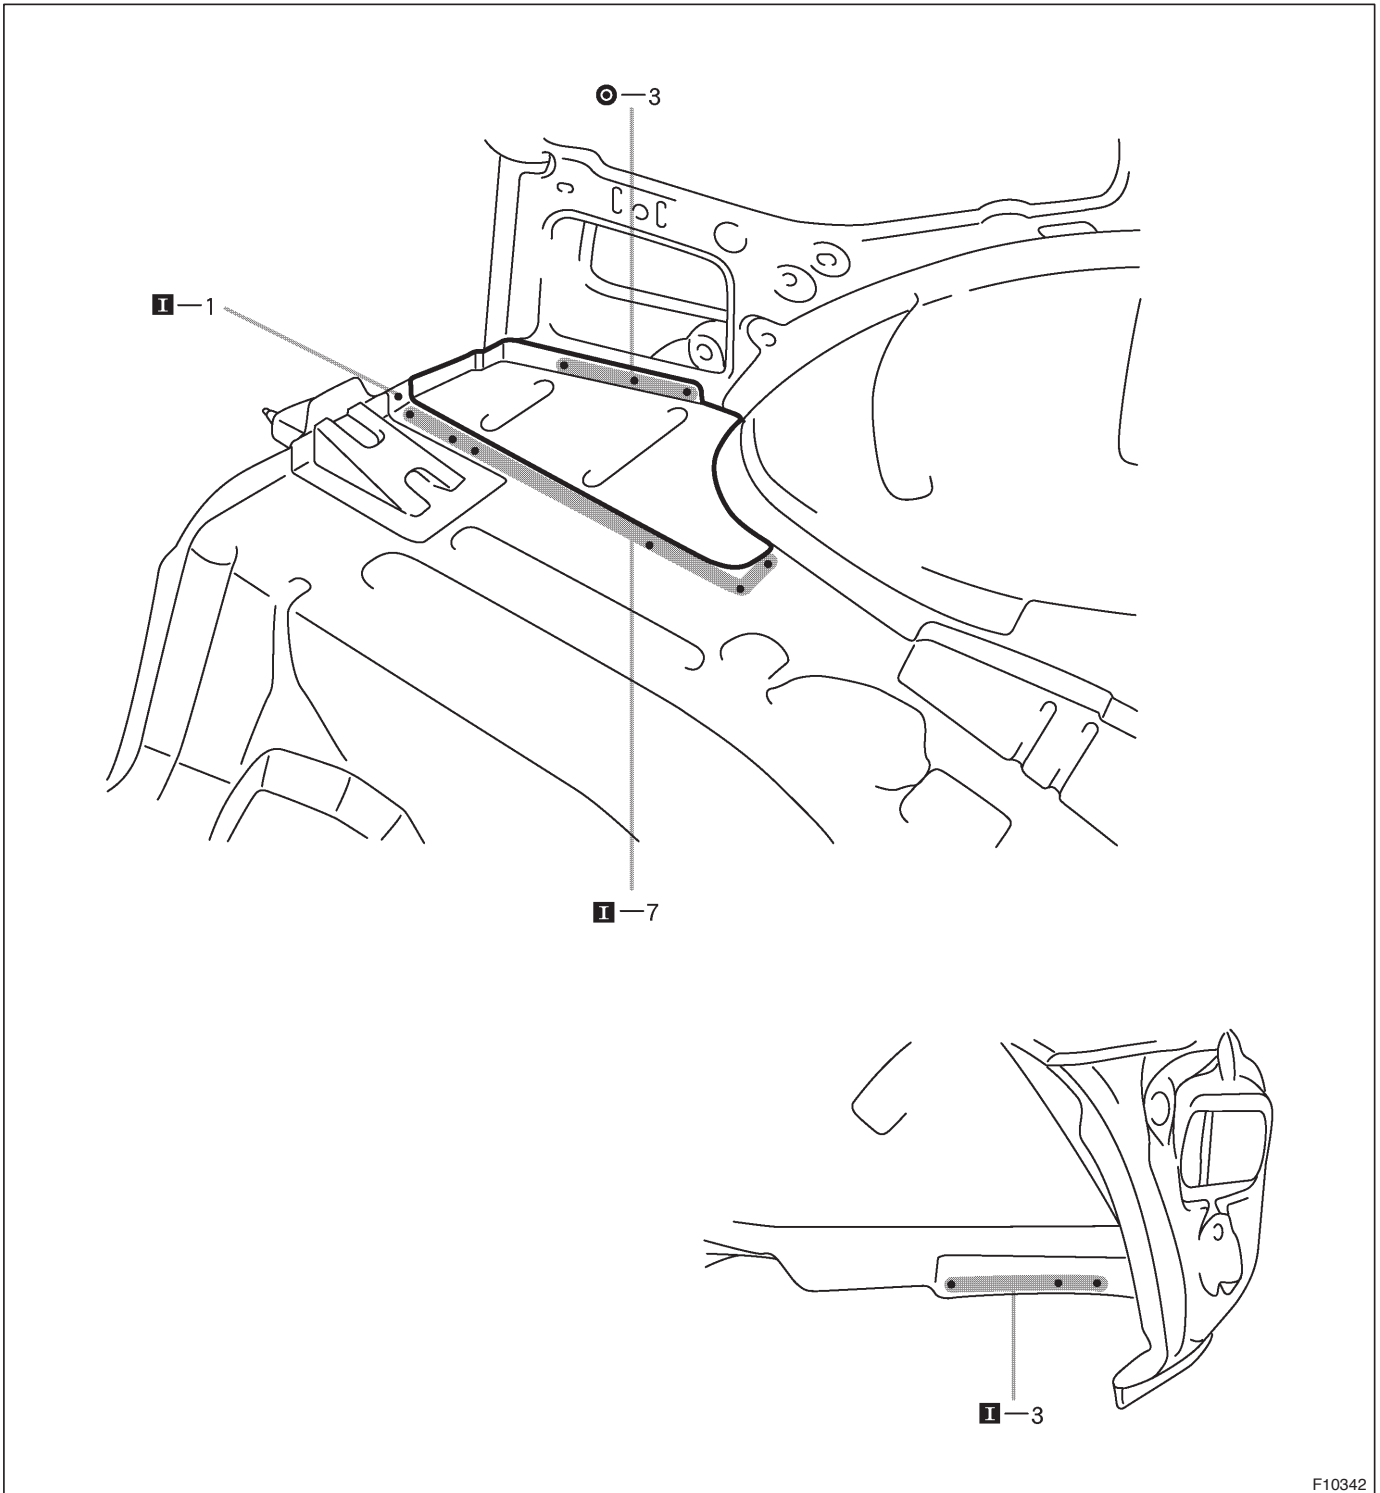

3. INSTALL REAR FLOOR PAN EXTENSION

F10342

4. **INSTALL BODY LOWER BACK PANEL** (See page BP-49)
5. **APPLYING SEALER TO THE INSIDE OF THE VEHICLE** (See page PC-1)
6. **APPLYING SEALER TO THE REAR LUGGAGE COMPARTMENT** (See page PC-1)
7. **APPLYING UNDER COATING** (See page PC-5)
8. **REPLACEMENT SILENCER SHEET** (See page PC-8)
9. **APPLYING ANTI-RUST AGENT**
 - (a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.