


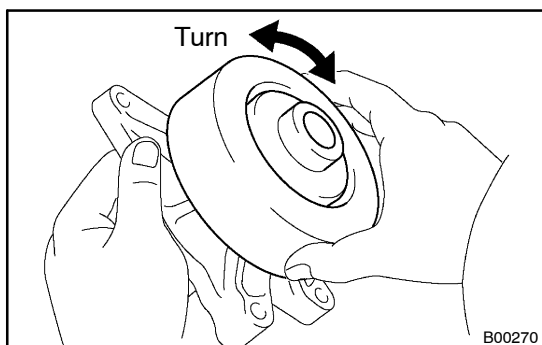

INSPECTION

INSPECT WATER PUMP

- (a) Visually check the drain hole for coolant leakage.
If leakage is found, replace the water pump.
- (b) Turn the pulley, and check that the water pump bearing moves smoothly and quietly.

If necessary, replace the water pump.