


REMOVAL

1. REMOVE UPPER FRONT FENDER APRON SEAL AND UPPER RADIATOR SUPPORT SEAL
2. DRAIN ENGINE COOLANT
3. REMOVE BUMPER COVER
(See Pub. No. RM734E BO section)
4. REMOVE AIR CLEANER

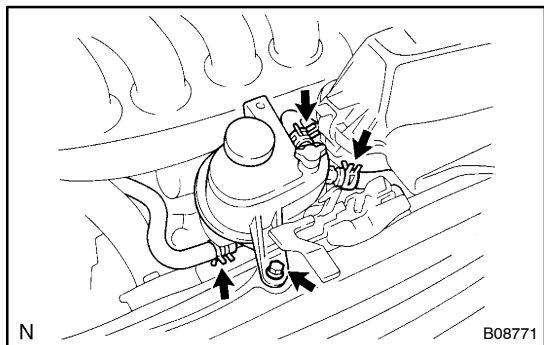

5. REMOVE ENGINE COOLANT RESERVOIR
 - (a) Disconnect the 3 radiator reservoir hoses.
 - (b) Remove the bolt and engine coolant reservoir.

6. REMOVE RADIATOR ASSEMBLY

- (a) Disconnect the No. 1 electric cooling fan connector.
 - (b) Disconnect the No. 2 electric cooling fan connector.
 - (c) Disconnect the upper radiator hose.
 - (d) Disconnect the lower radiator hose.
 - (e) Disconnect the 2 A/T oil cooler hoses.
 - (f) Remove the 3 bolts, and disconnect the hood lock.
 - (g) Remove the 2 bolts and center brace.
 - (h) Remove the 2 bolts, 2 nuts and 2 condensor upper supports.
 - (i) w/ Cruise control system:
Remove the bolt, and disconnect the cruise control actuator.
 - (j) Remove the 2 bolts and radiator upper support.
 - (k) Remove the 2 upper radiator support bushings.
 - (l) Remove the radiator assembly.
 - (m) Remove the 2 lower radiator support bushings.
7. REMOVE ELECTRIC COOLING FAN FROM RADIATOR

Remove the 2 bolts and cooling fan assembly.

