


DISASSEMBLY

1. REMOVE DRAIN PLUG

- Remove the drain plug.
- Remove the O-ring.

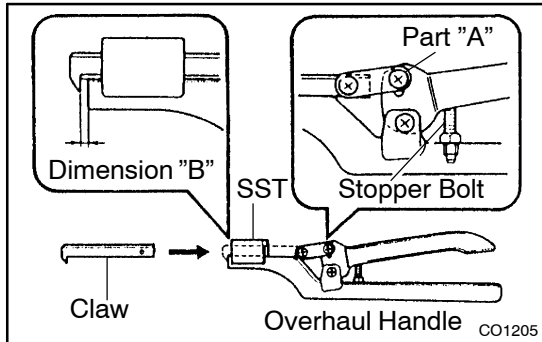

2. DENSO Made:

ASSEMBLE SST

SST 09230-01010

- Install the claw to the overhaul handle, inserting it in the hole in part "A" as shown in the diagram.
- While gripping the handle, adjust the stopper bolts so that dimension "B" shown in the diagram is 0.2 - 0.3 mm (0.008 - 0.012 in.).

NOTICE:


If this adjustment is not done the claw may be damaged.

3. DENSO Made:

UNCAULK LOCK PLATES

Using SST to release the caulking, squeeze the handle until stopped by the stopper bolts.


SST 09230-01010

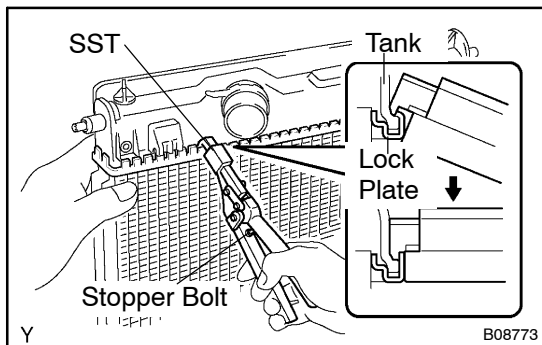

4. DENSO Made:

REMOVE TANKS AND O-RINGS

Lightly tap the bracket of the radiator (or radiator inlet or outlet) with a soft-faced hammer, and remove the tank and the O-ring.

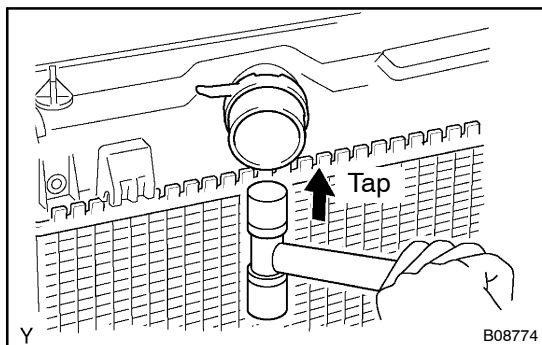

5. A/T (DENSO Made):

REMOVE OIL COOLER FROM LOWER TANK

- Loosen the nut, and remove the cooler pipe.
- Remove the 2 nuts and 2 plate washers.
- Remove the oil cooler and 2 O-rings.

