

INSTALLATION



1. INSTALL ELECTRIC COOLING FAN TO RADIATOR

Install the cooling fan with the 2 bolts.

Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)

2. INSTALL RADIATOR ASSEMBLY

- (a) Install the 2 lower radiator support bushings.
- (b) Install the radiator assembly.
- (c) Install the 2 upper radiator support bushings.
- (d) Install the radiator upper support with the 2 bolts.
- (e) w/ Cruise control system:
Install the cruise control actuator with the 3 bolts.
- (f) Install the 2 condenser upper supports with the 2 bolts and nuts.
- (g) Install the center brace with the 2 bolts.
- (h) Install the hood lock with the 3 bolts.
- (i) Connect the 2 A/T oil cooler hoses.
- (j) Connect the lower radiator hose.
- (k) Connect the upper radiator hose.
- (l) Connect the No. 1 electric cooling fan connector.
- (m) Connect the No. 2 electric cooling fan connector.

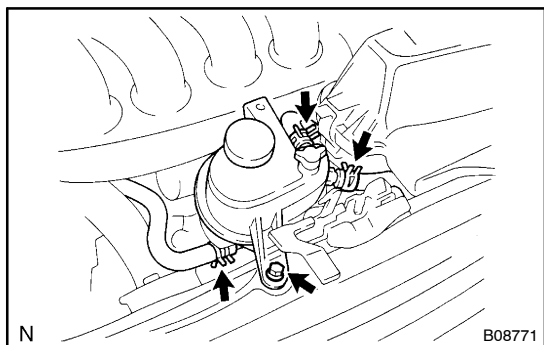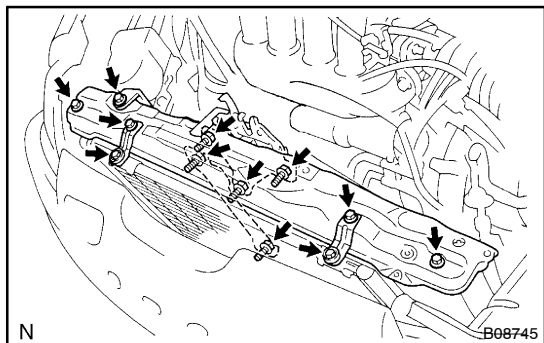

3. INSTALL ENGINE COOLANT RESERVOIR

- (a) Install the engine coolant reservoir with the bolt.

Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)

- (b) Connect the 3 radiator reservoir hoses.

4. INSTALL AIR CLEANER

5. INSTALL BUMPER COVER

(See Pub. No. RM734E BO section)

6. FILL WITH ENGINE COOLANT

7. INSTALL UPPER FRONT FENDER APRON SEAL AND UPPER RADIATOR SUPPORT SEAL

8. START ENGINE AND CHECK FOR COOLANT LEAKS