

REMOVAL

1. **REMOVE UPPER FRONT FENDER APRON SEAL AND UPPER RADIATOR SUPPORT SEAL**
2. **DRAIN ENGINE COOLANT**
3. **REMOVE BUMPER COVER (See Pub. No. RM734E BO section)**
4. **REMOVE RADIATOR UPPER SUPPORT**
 - (a) Remove the air cleaner assembly.
 - (b) Remove the engine coolant reservoir.
 - (c) Remove the 3 bolts, and disconnect the hood lock.
 - (d) Remove the 2 bolts and center brace.
 - (e) Remove the 2 bolts, 2 nuts and 2 condenser upper supports.
 - (f) w/ Cruise control system:
Remove the bolt, and disconnect the cruise control actuator.
 - (g) Remove the 2 bolts and radiator upper support.
5. **REMOVE COOLING FAN**
 - (a) Disconnect the 2 cooling fan connectors.
 - (b) Remove the 2 bolts and cooling fan.