


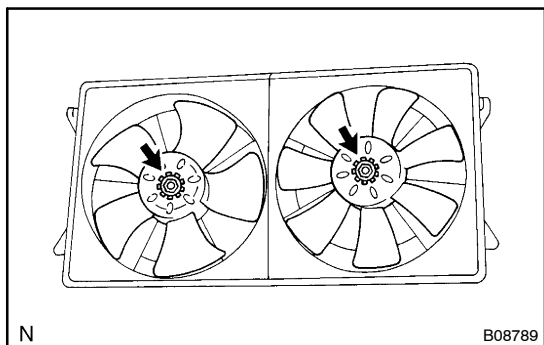

DISASSEMBLY

1. REMOVE FAN(S)

Remove the nut and fan.

2. REMOVE FAN MOTOR(S)

- (a) Disconnect the wire and connector holder from the fan shroud.
- (b) Remove the 3 screws and fan motor.