


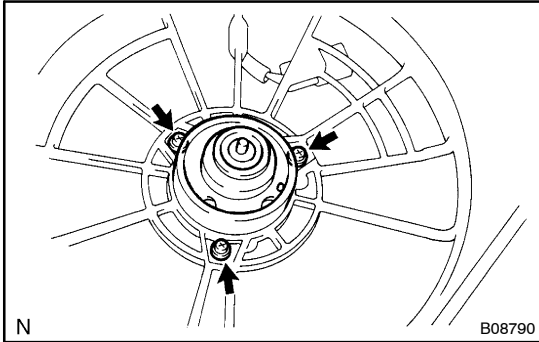


REASSEMBLY

1. INSTALL FAN MOTOR(S)

- (a) Install the fan motor with the 3 screws.

Torque: 2.55 N·m (26 kgf·cm, 23 in·lbf)

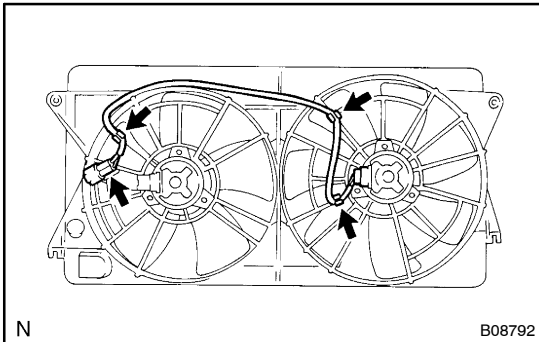

- (b) Install the wire and connector holder to the fan shroud.

2. INSTALL FAN(S)

Install the fan with the nut.

Torque: 6.18 N·m (63 kgf·cm, 55 in·lbf)