


ENGINE

HOW TO PROCEED WITH TROUBLESHOOTING

DI4DW-04

When using hand-held tester, troubleshooting in accordance with the procedure on the following page.

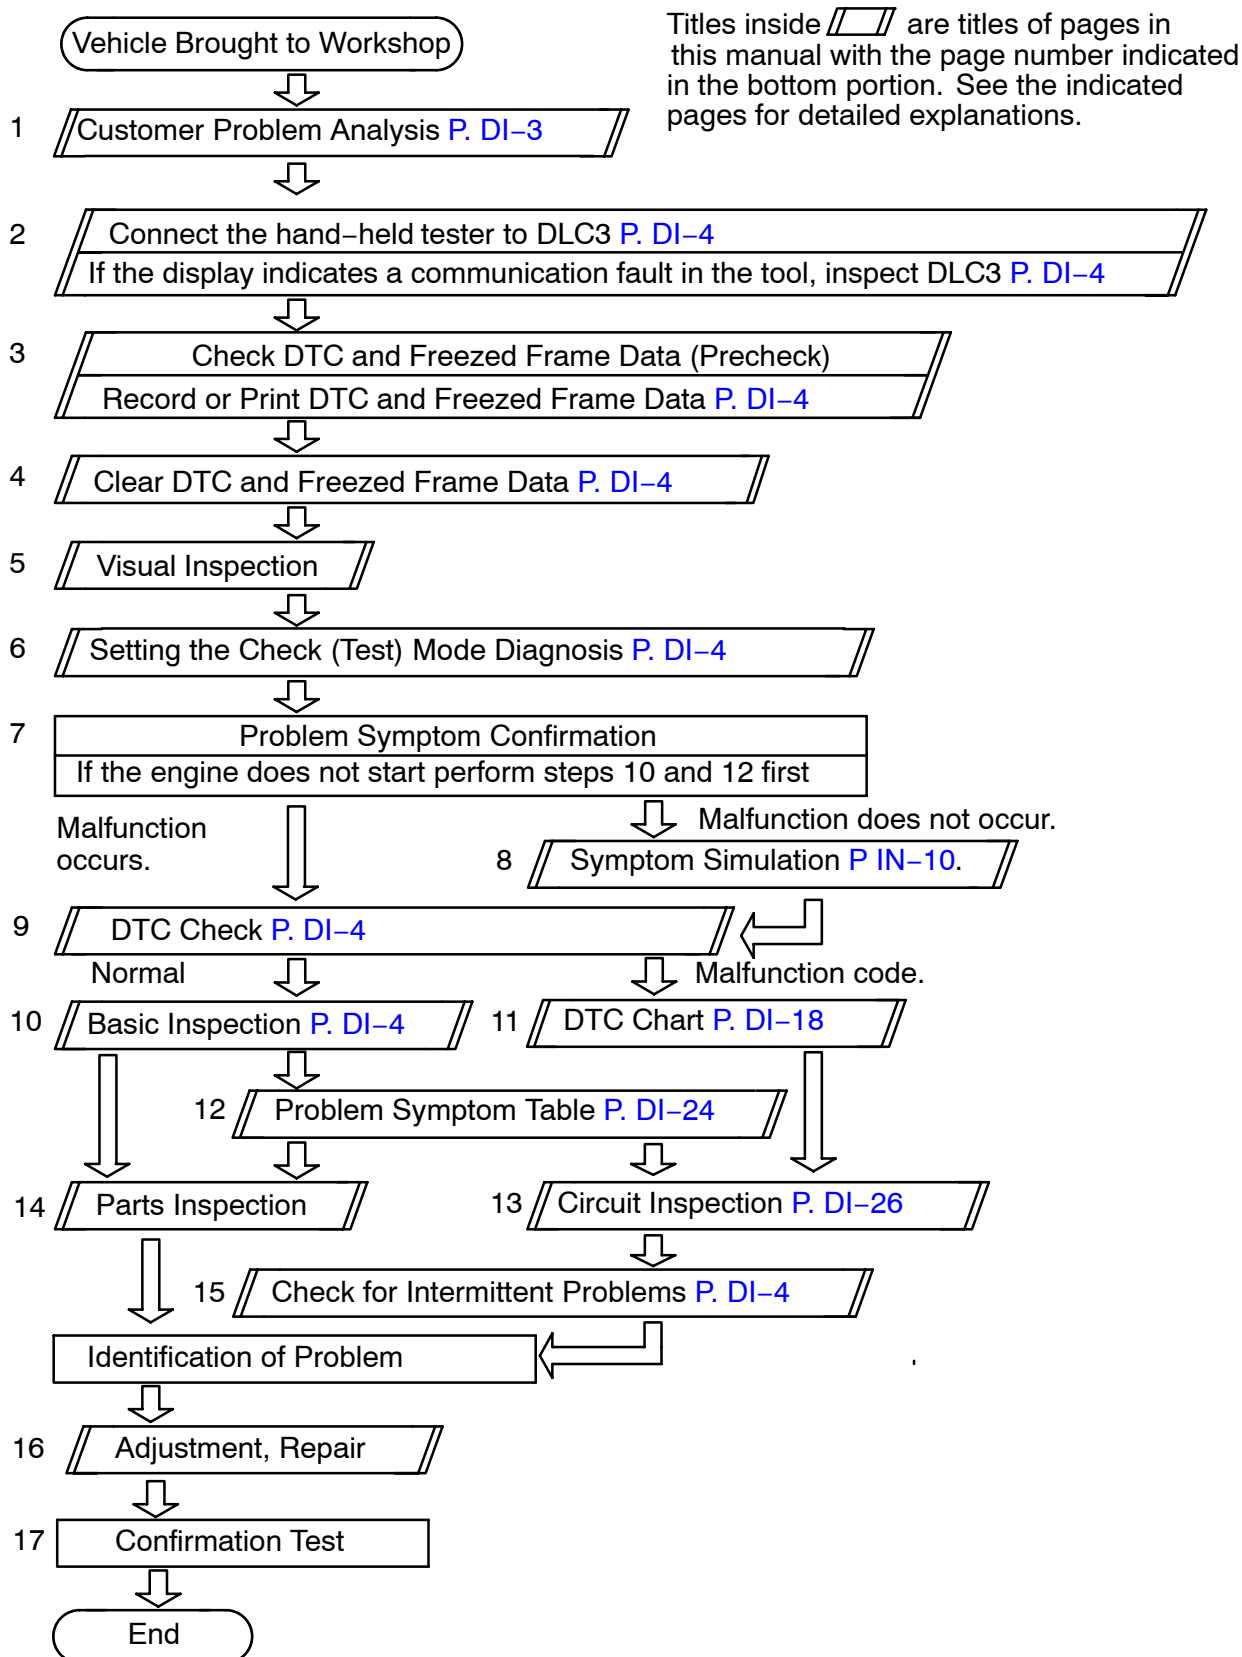

When not using hand-held tester, troubleshooting in accordance with the procedure on the following pages.

