

DTC	P1335/13	Crankshaft Position Sensor Circuit Malfunction (During engine running)
------------	-----------------	---

CIRCUIT DESCRIPTION

Refer to DTC P0335/12, 13 (Crankshaft Position Sensor "A" Circuit Malfunction) on [page DI-82](#).

DTC No.	DTC Detecting Condition	Trouble Area
P1335/13	If conditions (a) through (c) are met: (a) NE $\geq$ 1,000 rpm (b) NE signal is not detected for over 50 m sec. (c) Not during cranking	• Open or short in crankshaft position sensor circuit • Crankshaft position sensor • Engine ECU

See DTC P0335/12, 13 for Wiring Diagram and Inspection Procedure.