


REMOVAL

CAUTION:


Do not smoke or work near an open flame when working on the fuel pump.

1. REMOVE REAR SEAT CUSHION
2. REMOVE FLOOR SERVICE HOLE COVER
3. DISCONNECT FUEL PUMP & SENDER GAUGE CONNECTOR

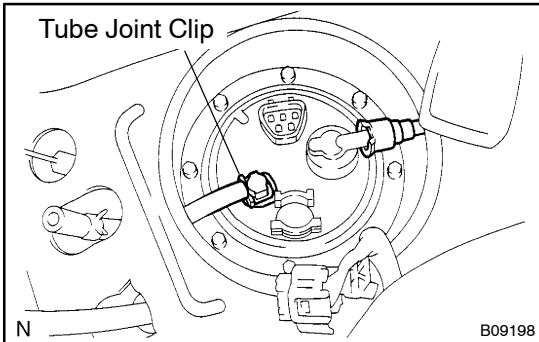


4. DISCONNECT FUEL TUBE AND EMISSION TUBE


- (a) Wash away the mud, dust and the likes on the fuel suction plate with water.
- (b) Pull off the tube joint clip from the No. 1 fuel suction plate.
- (c) Disconnect the fuel tube from the fuel pump assembly.
- (d) Disconnect the emission tube from the fuel pump assembly.

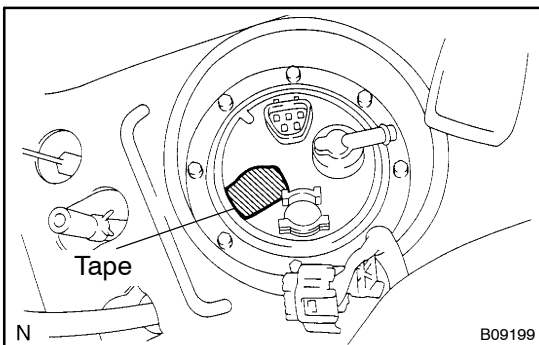

- (e) Attach the tape in order to protect the port portion from the dust.

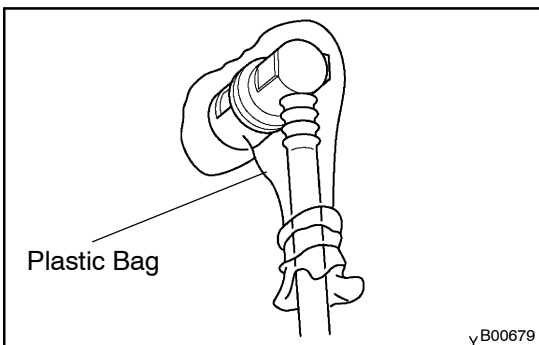

- (f) Protect the disconnected fuel tube from damage and foreign material by covering it with a plastic bag.

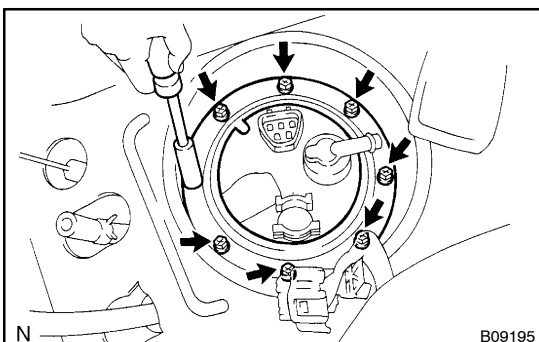

5. REMOVE FUEL PUMP ASSEMBLY FROM FUEL TANK

- (a) Remove the 8 bolts and fuel tank vent tube set plate.
- (b) Pull out the fuel pump assembly.

NOTICE:

- Do not damage the fuel pump filter.
 - Be careful that the arm of the sender gauge should not bent.
- (c) Remove the gasket from the pump assembly.