



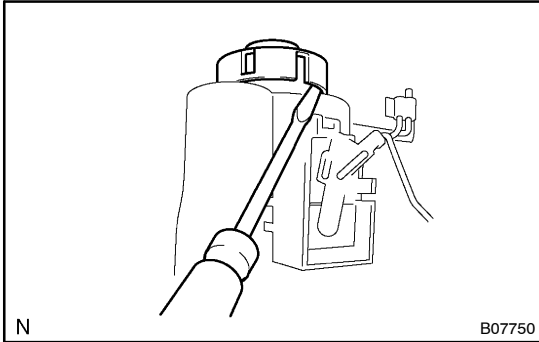

DISASSEMBLY


1. REMOVE NO. 2 FUEL SUCTION SUPPORT

- (a) Using a small screwdriver, remove the No. 2 fuel suction support.
- (b) Remove the rubber cushion.

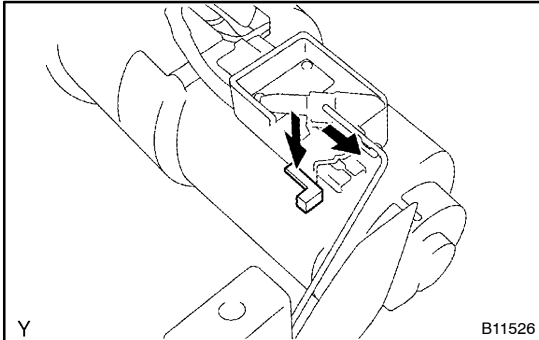

2. REMOVE NO. 1 FUEL SUCTION SUPPORT

- (a) Disconnect the fuel sender gauge connector and earth plate.
- (b) While pressing the lock of the fuel pump filter, slide the fuel sender gauge and remove it.

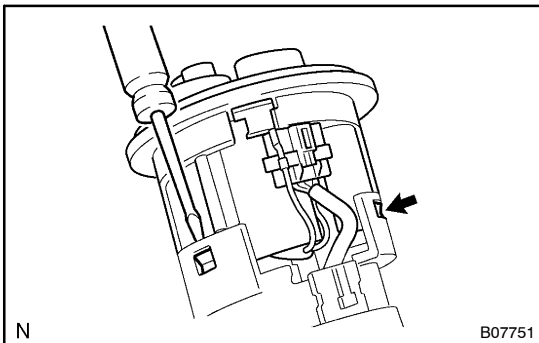

- (c) Using a small screwdriver, remove the No. 1 fuel suction support.


NOTICE:

Do not damage the fuel suction support and fuel suction plate.

- (d) Disconnect the fuel pump harness from the No. 1 fuel suction support and fuel pump.


3. REMOVE FUEL PRESSURE REGULATOR

Pull out the fuel pressure regulator and O-ring from the fuel filter.

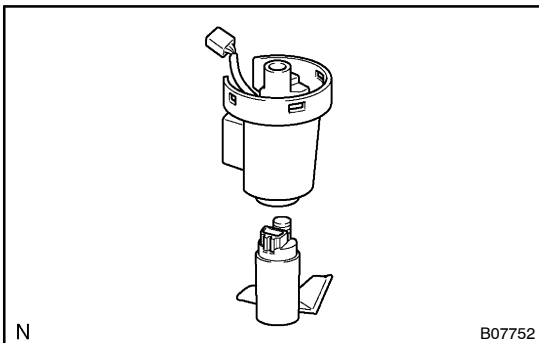

4. REMOVE FUEL PUMP

Remove the pump from the fuel filter.

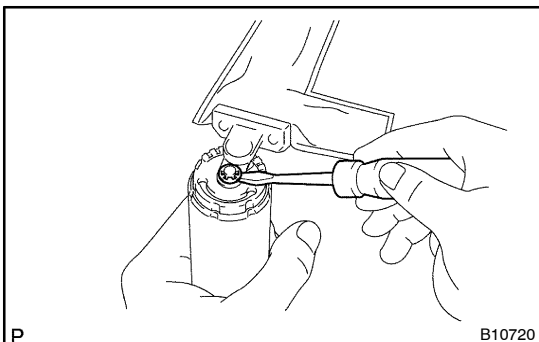

5. REMOVE FUEL SUCTION FILTER

- (a) Using a small screwdriver, pry out the clip.
- (b) Pull out the suction filter.