



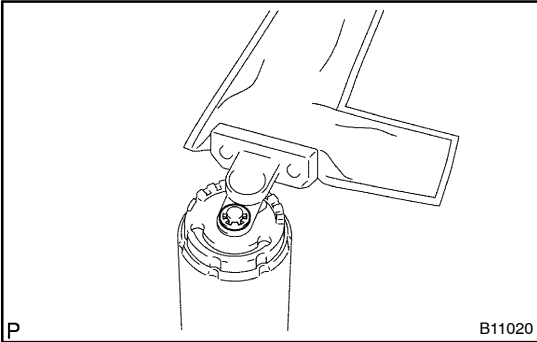

REASSEMBLY

1. INSTALL FUEL SUCTION FILTER

Install the suction filter with a new clip.

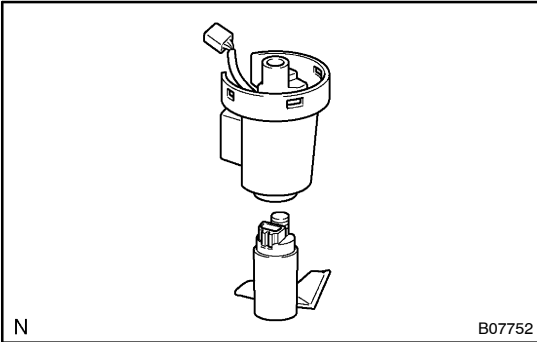

2. INSTALL FUEL PUMP

Connect the fuel pump to the fuel filter.

3. INSTALL FUEL PRESSURE REGULATOR

(a) Install the O-ring to the pressure regulator.

HINT:


Apply a light coat of gasoline to a new O-ring, and install it to the pressure regulator.

(b) Connect the pressure regulator to the fuel filter.

4. INSTALL NO. 1 FUEL SUCTION SUPPORT

(a) Connect the fuel pump harness to the No. 1 fuel suction support and fuel pump.

(b) Install the No. 1 fuel suction support to the fuel filter.

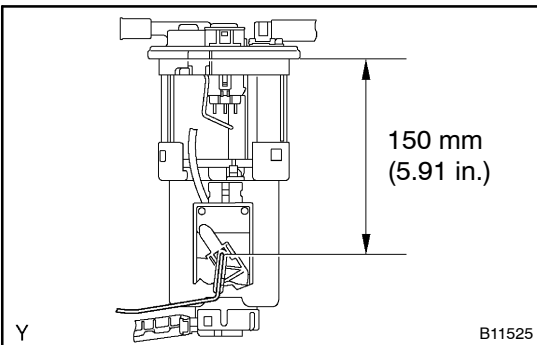

(c) Install the fuel sender gauge to the fuel pump filter so that the distance between the No.1 fuel suction support and the float fulcrum of the fuel sender gauge is 150 mm (5.91 in.).

(d) Connect the fuel sender gauge connector and earth plate.

5. INSTALL NO. 2 FUEL SUCTION SUPPORT

(a) Install the rubber cushion.

(b) Install the No. 2 fuel suction support to the No. 1 fuel suction support.