

REMOVAL

1. REMOVE FUEL PUMP ASSEMBLY FROM FUEL TANK ([See page FI-11](#))
2. REMOVE NO. 1 FUEL SUCTION SUPPORT ([See page FI-12](#))
3. REMOVE FUEL PRESSURE REGULATOR
 - (a) Pull out the pressure regulator.
 - (b) Remove the O-ring from the pressure regulator.