

INSTALLATION

INSTALL AIR FLOW METER

Install the air flow meter and a new O-ring with 2 screws.