


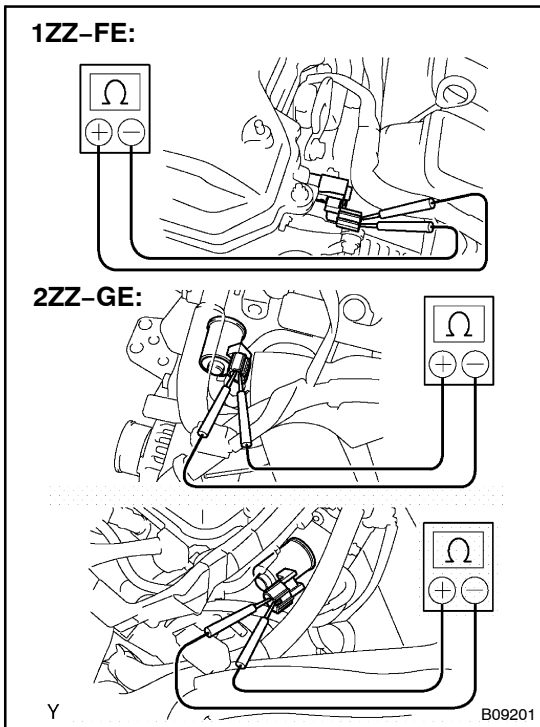

CAMSHAFT TIMING OIL CONTROL VALVE

SF0SL-07

ON-VEHICLE INSPECTION

INSPECT OIL CONTROL VALVE RESISTANCE

- (a) Remove the No. 2 cylinder head cover.
- (b) 2ZZ-GE:
Disconnect the 2 PCV hoses.
- (c) Disconnect the oil control valve connector.
- (d) Using an ohmmeter, measure the resistance between the terminals.

Resistance: 6.9 – 7.9 Ω at 20°C (68°F)

If the resistance is not as specified, replace the valve.

- (e) Reconnect the oil control valve connector.
- (f) Reinstall the V-bank cover.