


IDLE SPEED CONTROL (ISC) VALVE

ON-VEHICLE INSPECTION

FI0MA-02

INSPECT ISC VALVE OPERATION

- (a) Initial conditions:
- Engine at normal operating temperature
 - Idle speed set correctly
 - Transmission in neutral
 - A/C switch OFF

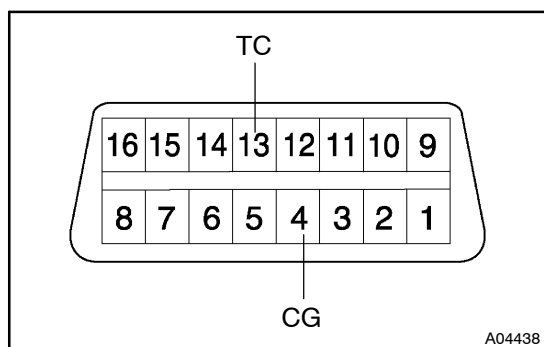

- (b) Using SST, connect terminals TC and CG of the DLC3.
SST 09843-18020
- (c) After engine speed has been kept at 900 – 1,300 rpm for 5 seconds, check that it returns to idle speed.
If the rpm operation is not as specified, check the ISC valve, wiring and engine ECU.
- (d) Remove the SST from the DLC3.
SST 09843-18020