


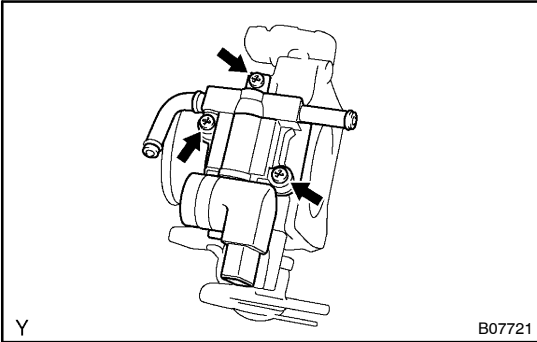

REMOVAL

1. REMOVE THROTTLE BODY
(See page FI-33)

2. REMOVE ISC VALVE

Remove the 4 screws, ISC valve and gasket.