


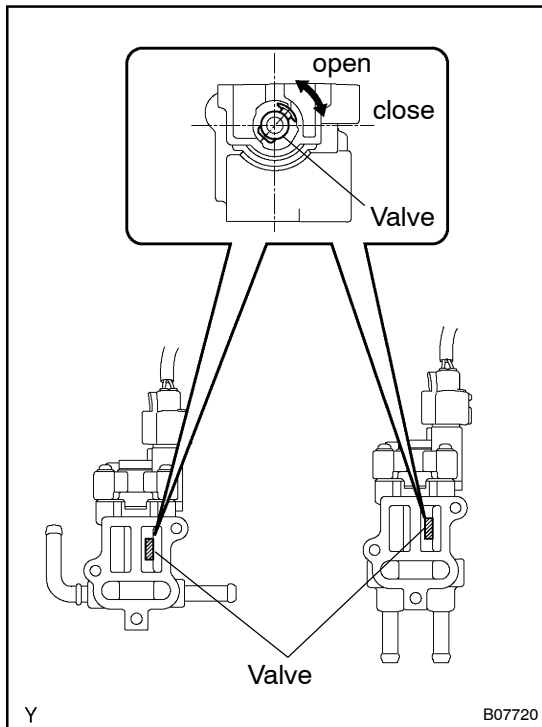

INSPECTION

INSPECT ISC VALVE OPERATION

- (a) Check that the ISC valve is half opened.
- (b) Connect the ISC valve connector to the ISC valve.
- (c) Disconnect the water temperature sensor connector from the water temperature sensor.
- (d) Turn the ignition switch ON.
- (e) Check that the ISC valve moves.

HINT:

Repeat connecting and disconnecting of ISC valve connector several times and check the operation of the valve.

If operation is not as specified, replace the ISC valve.

- (f) Turn the ignition switch OFF.
- (g) Connect the water temperature sensor connector to the water temperature sensor.
- (h) Disconnect the ISC valve connector from the ISC valve.