

INSTALLATION

Installation is in reverse order of removal ([See page FI-47](#)).

HINT:

Install the ISC valve with a new gasket.