


INSPECTION

1. DRAIN ENGINE COOLANT
2. REMOVE NO.2 CYLINDER HEAD COVER
3. REMOVE WATER TEMPERATURE SENSOR
 - (a) Disconnect the sensor connector.
 - (b) Remove the water temperature sensor.

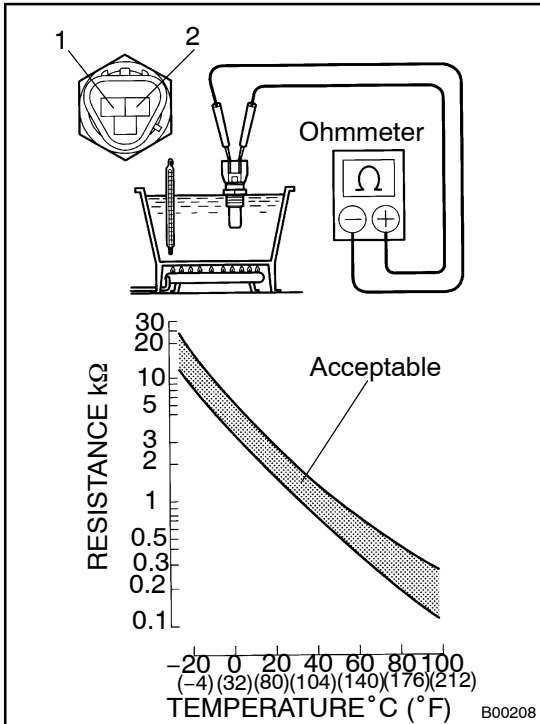

4. INSPECT WATER TEMPERATURE SENSOR RESISTANCE

Using an ohmmeter, measure the resistance between terminals 1 (E2) and 2 (THW).

Resistance: Refer to the graph

If the resistance is not as specified, replace the ECT sensor.

5. REINSTALL WATER TEMPERATURE SENSOR

Install a new gasket to the water temperature sensor and connect the connector.

6. REINSTALL NO.2 CYLINDER HEAD COVER

7. FILL RADIATOR WITH ENGINE COOLANT