



INSPECTION

1. REMOVE THROTTLE BODY
(See page FI-33)
2. REMOVE RADIATOR RESERVOIR
(See page CO-17)
3. REMOVE INTAKE MANIFOLD
(See page EM-43)

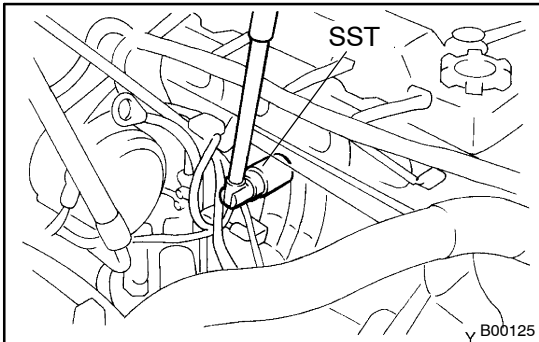

4. REMOVE KNOCK SENSOR
 - (a) Disconnect the knock sensor connector.
 - (b) Using SST, remove the knock sensor.
SST 09816-30010

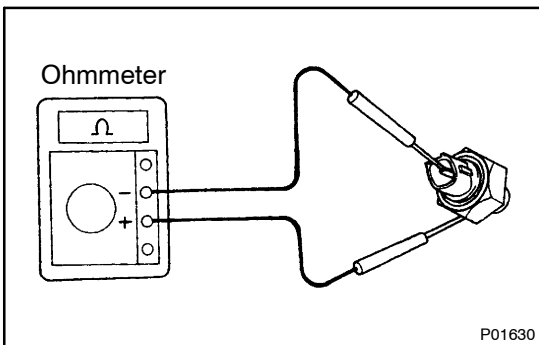

5. INSPECT KNOCK SENSOR
Using an ohmmeter, check that there is continuity between the terminal and body.
If there is continuity, replace the sensor.
6. REINSTALL KNOCK SENSOR
 - (a) Using SST, install the knock sensor.
SST 09816-30010
 - (b) Connect the knock sensor connector.
7. REINSTALL INTAKE MANIFOLD
(See page EM-66)
8. REINSTALL RADIATOR RESERVOIR
(See page CO-23)
9. REINSTALL THROTTLE BODY
(See page FI-36)